


EN Operating and installation instructions BFIA, BFIU

Surface induction glass ceramic cooktop with
cooktop extractor

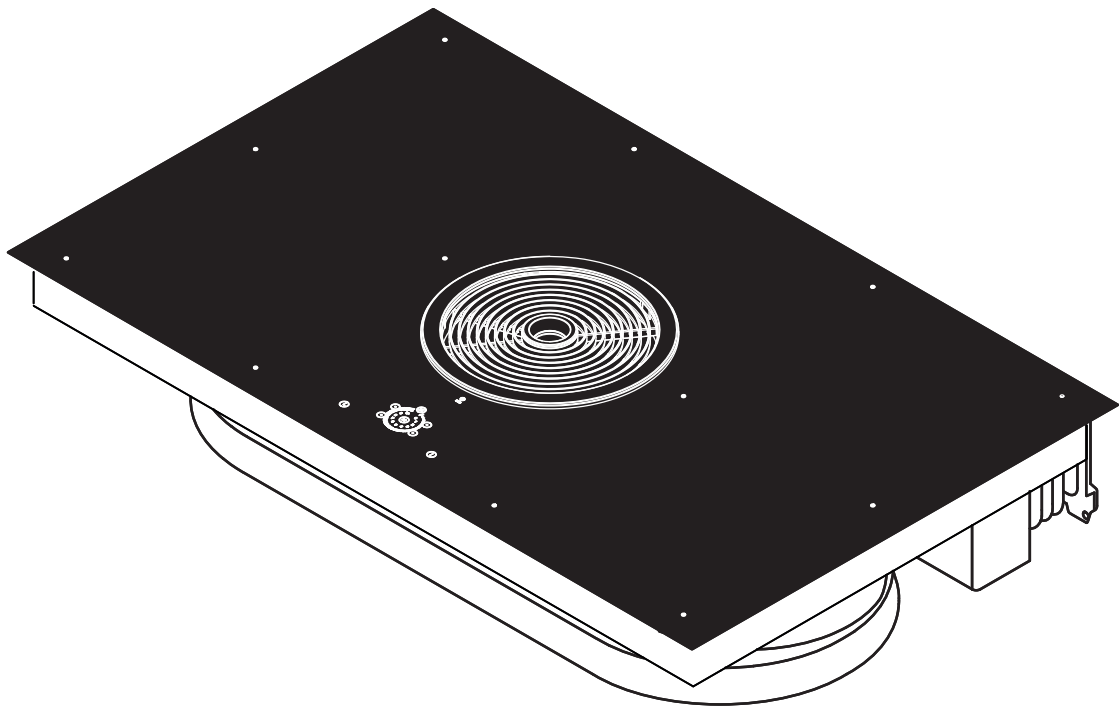

Operating and installation instructions:

Original

Translation

Manufacturer

BORA Vertriebs GmbH & Co KG
Prof.-Dr.-Anton-Kathrein-Straße 3
6342 Niederndorf
Austria

Contact
T +43 (0) 5373 / 62250-0
mail@bora.com
www.bora.com

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

These operating and installation instructions have been drawn up with the greatest of care. But it cannot be ruled out that subsequent technical modifications have not yet been incorporated or the relevant content has not yet been adapted. Please accept our apologies in this eventuality. An updated version can be requested from the BORA Service Team. Subject to printing errors and mistakes.

© BORA Vertriebs GmbH & Co KG

All rights reserved.

Table of Contents

1	General information	4		
2	Safety	6		
2.1	General safety instructions	6		
2.2	Safety instructions – operation	7		
2.3	Safety instructions – installation	10		
2.4	Safety instructions – disassembly and disposal	11		
2.5	Safety instructions – spare parts	11		
2.6	Intended use	11		
3	Technical data	12		
4	Energy label	13		
5	Device description	14		
5.1	Structure	14		
5.2	Operating panel and operating principle	15		
5.3	Functional principle of the cooking zone	16		
5.3.1	Power levels	16		
5.3.2	Automatic heat up function	16		
5.3.3	power setting	16		
5.3.4	Heat retention levels	16		
5.3.5	Bridging function	17		
5.3.6	Pause function	17		
5.3.7	Timer functions	17		
5.3.8	Pan size recognition	17		
5.3.9	Suitable cookware	17		
5.4	Functional principle of the cooktop extractor ...	17		
5.4.1	Freely adjustable power control	17		
5.4.2	Automatic cooktop extractor function	17		
5.4.3	Power setting	18		
5.4.4	Automatic after-run	18		
5.4.5	Filter service display	18		
5.4.6	Interface communication	18		
5.5	Safety devices	18		
5.5.1	Residual heat display	18		
5.5.2	Safety shut-down	18		
5.5.3	Cooking zone overheating protection	18		
5.5.4	Automatic switch-off if the button is pressed and held	18		
5.5.5	Childproofing feature	18		
6	Installation	19		
6.1	Checking the scope of delivery	19		
6.2	Tool and aids	19		
6.3	Assembly instructions	19		
6.3.1	Safety distances	19		
6.4	Cut-out dimensions for the cooktop	19		
6.5	Installing the recirculation version (BFIU)	21		
6.6	Installing the exhaust air version (BFIA)	24		
6.6.1	Operating the cooktop extractor with a fireplace that depends on the air in the room ...	24		
6.7	Establishing the power connection	28		
6.8	Device power management (overall power reduction)	29		
6.9	Connect the external switch contact	29		
6.10	Handover to user	31		
7	Operation	32		
7.1	General operating instructions	32		
7.2	Operating the cooktop	32		
7.2.1	Select cooking zone	32		
7.2.2	Adjusting the power level	32		
7.2.3	Changing the power level	32		
7.2.4	Selecting the power setting	32		
7.2.5	Switching the power setting off early	32		
7.2.6	Switching off the cooking zone	32		
7.2.7	Pay attention to the residual heat display	32		
7.2.8	Pause function	33		
7.2.9	Bridging function	33		
7.2.10	Switching on the bridging function	33		
7.2.11	Switching off the bridging function	33		
7.2.12	Automatic heat up function	33		
7.2.13	Switching off the automatic heat up function ...	34		
7.2.14	Heat retention level	34		
7.2.15	Using the timer function	34		
7.2.16	Switching the signal beep off early	34		
7.2.17	Setting the short-time timer (egg timer)	34		
7.2.18	Switching off the short-time timer (egg timer) early	34		
7.2.19	Setting the automatic cut-off	34		
7.2.20	Switching off the automatic cut-off early	34		
7.2.21	Changing the timer settings	34		
7.2.22	Switching the childproofing feature on/off	35		
7.3	Operating the cooktop extractor	35		
7.3.1	Selecting a cooktop extractor	35		
7.3.2	Adjusting the power level	35		
7.3.3	Changing the power level	35		
7.3.4	Selecting the power setting	35		
7.3.5	Automatic cooktop extractor function	35		
7.3.6	Switching off the automatic cooktop extractor function	36		
7.3.7	Automatic after-run	36		
7.3.8	Switching off the automatic after-run early	36		
7.3.9	Switching off the cooktop extractor	36		
7.4	Pay attention to the filter service display	36		
7.5	Saving energy	36		
8	Cleaning and maintenance	37		
8.1	Cleaning agents	37		
8.2	Maintaining the cooktop	37		
8.3	Cleaning the cooktop	37		
8.4	Cleaning the cooktop extractor	38		
8.4.1	Removing the air inlet nozzle and stainless steel grease filter	38		
8.4.2	Cleaning the air inlet nozzle and stainless steel grease filter	38		
8.4.3	Installing stainless steel grease filter and air inlet nozzle	38		
8.5	Cleaning the air guiding housing	38		
8.5.1	Opening the air guiding housing	38		
8.5.2	Closing the air guiding housing	39		
8.6	Replacing the activated charcoal filter	39		
9	Troubleshooting	41		
10	Decommissioning, disassembly and disposal	42		
10.1	Decommissioning	42		
10.2	Disassembly	42		
10.3	Environmentally-friendly disposal	42		
11	Warranty, technical service and spare parts	43		
11.1	Warranty	43		
11.2	Service	43		
11.3	Replacement parts	43		

1 General information

Target group

These operating and installation instructions apply for the following target groups:

Target group	Requirements
User	The appliance can be used by children aged 8 and above as well as people with reduced physical, sensory or mental capacities or a lack of experience and/or knowledge if they are supervised or have been instructed how to safely use the appliance and understand the resultant risks. Children must be supervised. All safety and warning information and the handling instructions in the installation instructions must be complied with.
Ambitious DIYers	Ambitious DIYers can independently conduct all joinery and installation work providing they possess the necessary skills and expertise. They must never independently establish electricity and gas connections.
Installation specialists	Installation specialists are authorised to conduct all joinery and installation work in line with existing regulations. The electricity and gas connections must be certified by a certified engineer for the applicable trade prior to commissioning.
Electricians	The electrical connection may only be established by a certified engineer. He/she also assumes responsibility for the proper electrical installation and commissioning.
Gas specialists	The gas connection may only be established by certified engineers. They also assume responsibility for proper installation and commissioning of the gas system.

Tab. 1.1 Target groups

INFO BORA Holding GmbH, BORA Vertriebs GmbH & Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH - hereinafter referred to as BORA - do not assume any liability for damage arising from non-adherence to these documents and from improper assembly! The electricity and gas connections must be made by a qualified specialist. Installation must comply with the valid standards, regulations and laws. All safety and warning information and the operating and installation instructions must be complied with.

Validity of the operating and installation instructions

These instructions apply to several device versions. It is therefore possible that some of the features described do not apply to your appliance.

Other applicable documents

These operating and installation instructions are valid in conjunction with other documents, which must be adhered to.

Please be sure to adhere to all documents that form part of the scope of delivery.

INFO BORA accepts no liability for damage caused by failure to comply with these documents!

Directives

These devices meet the following EU/EC directives:

2014/30/EU EMC Directive

2014/35/EU Low Voltage Directive

2009/125/EC Ecodesign Directive

2010/30/EU Energy Consumption Label Directive

2011/65/EU RoHS Directive

2012/19/EU WEEE Directive

Presentation of information

To make working with these instructions quick and easy, consistent formatting, numbering, symbols, safety instructions, terms and abbreviations are used throughout.

Handling instructions are marked with an arrow.

- ▶ Always carry out handling instructions in the sequence shown.

Bullet points are indicated by a square bullet point at the edge of the line.

- Bullet point 1
- Bullet point 2

INFO Information points out specific points you must always comply with.

Safety and warning information

The safety and warning information in these instructions are highlighted with symbols and signal words.

Safety and warning information is structured as follows:

WARNING SYMBOL AND SIGNAL WORD!




Type and source of the danger

Consequences of non-compliance

- ▶ Measures to minimise risk
-

The following applies:

- The warning symbol draws attention to the danger.
- The signal word indicates the severity of the risk.

Warning sign	Signal word	Hazard
	Danger	Indicates an imminent hazardous situation which could lead to death or serious injury if ignored.
	Warning	Indicates an imminent hazardous situation which could lead to death or serious injury if ignored.
	Caution	Indicates a potentially hazardous situation which could lead to slight or minor injuries if ignored.
–	Caution	Indicates a situation which could result in material damage if ignored.

Tab. 1.2 Meaning of warning symbols and signal words

2 Safety

2.1 General safety instructions

INFO The appliance complies with the stipulated safety requirements. The user is responsible for appliance cleaning and maintenance as well as its safe use. Improper use can lead to personal injury and damage to property.

- The operating and installation instructions contain important information about installation and operation. These enable you to protect yourself against injuries and prevent damage to the appliance. Contact details for further information as well as application and usage questions can be found on the back of these operating and installation instructions.
- The term device applies to cooktops, cooktop extractors and cooktops with cooktops extractors.
 - ▶ Read the operating and installation instructions fully before using the appliance for the first time.
 - ▶ Always store the operating and installation instructions within easy reach so that they can be accessed if required.
 - ▶ Pass the operating and installation instructions to the next owner if you sell the appliance.
 - ▶ Conduct all work extremely attentively and conscientiously.
 - ▶ Check the appliance for visible damage when unpacking it.
 - ▶ Do not connect a damaged appliance.
 - ▶ Only use the appliance once all installation activities are complete. This is the only way to ensure safe operation.
 - ▶ Make sure that hot hobs are not touched.
 - ▶ Avoid boiling over.
 - ▶ Pay attention to the residual heat display.
 - ▶ Switch the device off after use.
 - ▶ Do not rely on the pan size recognition.
 - ▶ Keep pets away from the appliance.

CAUTION!

Risk of injury from falling device components!

Falling device components such as pan supports, control elements, covers, grease filters, etc. can cause injuries.

- ▶ Place device components safely near the devices after you remove them.
 - ▶ Make sure that none of the device components you have removed could fall.
-

Recirculation mode

INFO When cooking, additional moisture is released into the ambient air.

INFO In recirculation mode, only a slight amount of moisture is removed from the cooking vapour.

- ▶ When using recirculation mode, ensure a sufficient supply of fresh air, e.g. by opening a window.
- ▶ Ensure a normal and comfortable room climate (humidity of 45–60%), e.g. by opening natural ventilation openings or using domestic ventilation systems.
- ▶ After every use in recirculation mode, switch the cooktop extractor to a low level for about 20 minutes or activate the automatic after-run function.

Effect on pacemakers, hearing aids and metallic implants

INFO Induction cooktops generate a high-frequency electromagnetic field near the cooking zones. Coming too close to the cooking zones could have a negative influence or even cause malfunctions of pacemakers, hearing aids or metallic implants. Issues with pacemakers are unlikely.

- ▶ In case of doubt, please contact the manufacturer of your medical device or your doctor.

Households with children and people with special needs

- ▶ The appliance can be used by children aged 8 and above as well as people with reduced physical, sensory or mental capacities or a lack of experience and/or knowledge if they are supervised or have been instructed how to safely use the appliance and understand the resultant risks.
- ▶ Supervise children in the vicinity of the appliance.
- ▶ Children must not play with the appliance.
- Use the childproofing feature to prevent children accidentally switching the cooktop on or changing the settings.
- ▶ Do not store any items that could be of interest to children in storage spaces above or behind the appliance. Children will otherwise be encouraged to climb on the appliance.
- ▶ Keep children and other people away from hot hobs.

Unauthorised modifications

Unauthorised modifications can cause the appliance to pose risks.

- ▶ Do not conduct any modifications to the appliance.

Cleaning and maintenance

The device must be cleaned regularly. Dirt can lead to damage or the buildup of odours. Remove any dirt immediately.

- Cleaning and maintenance work must not be carried out by children unless they are supervised at all times.
- ▶ Do not use steam cleaners. The steam can cause a short-circuit on live parts and cause damage to property (see Cleaning and maintenance section).

- ▶ Do not put hot cookware near the control panel so as not to damage the electronics underneath.
- ▶ Make sure no water penetrates inside the device when cleaning. Only use a slightly damp cloth. Never spray water on the device. Water ingress can cause damage!
- ▶ Where possible, clean the cooktop after every cooking session.
- ▶ Only clean the cooktop when it has cooled down.
- ▶ For cleaning, only use non-abrasive detergents to avoid scratching or wearing the surface.
- ▶ Make sure the base of the cookware and the cooking zone are clean and dry.
- ▶ Always lift the cookware (do not pull) to avoid scratching or wearing the surface.
- ▶ Do not place hot cookware on the air inlet nozzle of the cooktop extractor.
- ▶ Make sure that hot cookware does not come into contact with the edge of the air inlet nozzle.

2.2 Safety instructions – operation

Cooktop



DANGER!

Unsupervised cooktops are a fire risk!

Oil and fat can heat up and catch fire quickly.

- ▶ Never leave hot oil or fat unattended.
- ▶ Never attempt to extinguish burning oil or fat with water.
- ▶ Stifle the fire using a lid, for example.



DANGER!

Risk of explosion caused by flammable liquids!

Flammable liquids in the vicinity of the cooktop can explode and cause serious injury.

- ▶ Do not place any flammable liquids in the vicinity of the cooktop.

**DANGER!****Risk of electric shock!**

Chips, cracks or breaks in the glass ceramic panel can expose or damage the electronics underneath. This can lead to an electric shock.

- ▶ If the glass ceramic panel gets chipped, broken or cracked, switch the cooktop off immediately.
- ▶ Securely disconnect the appliance from the mains using LS switches, fuses, automatic circuit breakers or contactors.

**WARNING!****Risk of burns from hot cooktop!**

The cooktop and its exposed areas get hot during use. Once the cooking zone is switched off, it takes a little while to cool down below 60 °C. Touching hot surfaces can cause serious burns.

- ▶ Never touch the cooktop when it is hot.
- ▶ Keep children away from the cooktop when it is hot or ensure they are supervised at all times.

**WARNING!****Leaving items on the cooking surface is a fire risk!**

The cooktop and its touchable parts are hot when the cooking zone is switched on and during the cooling phase. Objects on the cooktop can get hot and catch fire.

- ▶ Do not place any items on the cooktop.

**WARNING!****Risk of burns from hot objects!**

The cooktop and its touchable parts are hot when the cooking zone is switched on and during the cooling phase. Objects (e.g. pan lids, cooktop extractor cover) on the cooktop heat up very quickly and can cause serious burns.

- ▶ Do not place any items on the cooktop.
- ▶ Please use suitable tools (pot holders, oven gloves).

**WARNING!****Risk of burns from hot cookware!**

Handles projecting over the edge are enticing for children to grab.

- ▶ Do not turn pot and pan handles so they stick out beyond the work surface.
- ▶ Make sure that children cannot pull hot pots and pans over.
- ▶ A special stove guard for children (available from specialist suppliers) reduces the risk.

**WARNING!****Risk of getting burnt!**

Liquid between the cooking zone and the pan base can evaporate and cause burns.

- ▶ Make sure that the cooking zone and the pan base are always dry.

CAUTION!**Damage from hard and pointed objects!**

Hard and pointed objects can damage the glass ceramic panel of the cooktop!

- ▶ Do not use the surface of the cooktop as a worktop.
- ▶ Do not use hard and pointed objects when working on the cooktop.

CAUTION!**Damage from sugary and salty foods!**

Sugary and salty foods and juices can damage the hot cooking zone.

- ▶ Make sure sugary and salty foods or juices do not get onto the cooking zone while it is hot.
- ▶ Remove sugary and salty foods and juices from the hot cooking zone.

CAUTION!**Escaping hot liquids!**

Unattended pans can boil over allowing hot liquids to escape.

- ▶ Always keep an eye on pans while cooking.
- ▶ Short cooking sessions must be constantly monitored.

Cooktop extractor



DANGER!

Risk of smoke inhalation!

Using a fireplace that depends on the air in the room produces combustion gases.

If the cooktop extractor is used in conjunction with a fireplace that depends on the air in the room, toxic combustion gases (carbon monoxide) can be extracted from the chimney or outlet duct into the living area.

- ▶ Make sure that there is always a sufficient air supply.



DANGER!

Fire risk from flambéing!

While the cooktop extractor is working, it sucks up grease from cooking. Flambéing food can cause the grease to catch fire.

- ▶ Clean the cooktop extractor regularly.
- ▶ Never work with a naked flame while the cooktop extractor is running.



DANGER!

Fire risk from fat deposits!

If the stainless steel grease filter is not cleaned regularly, this can lead to increased levels of grease in it. This increases the fire risk.

- ▶ Clean and replace the filter at regular intervals.



CAUTION!

Touchable parts may become hot!

The cooktop extractor and its touchable parts are hot when the cooking zone is switched on and during the cooling phase.

- ▶ Do not place any items on the cooktop.
- ▶ Please use suitable tools (pot holders, oven gloves).



WARNING!

There is a risk of injury when opening the lower cover on the housing!

There is a risk of injury if the fan wheel turns.

- ▶ Switch the cooktop extractor and the cooktop off.
- ▶ Switch off the fuse.

CAUTION!

Damage caused by objects or paper suctioned in!

Small and light items, such as cleaning cloths made from material or paper, can be suctioned into the cooktop extractor. This can damage the fan or impair the exhaust performance.

- ▶ Do not store any items or paper on the cooktop extractor.

CAUTION!

Damage caused by grease and dirt deposits!

Grease and dirt deposits can stop the cooktop extractor from functioning properly.

- ▶ Never use the cooktop extractor without a stainless steel grease filter.

CAUTION!

Risk of injury from objects on the cooktop!

Objects such as pan lids on the cooktop can damage the glass ceramics.

- ▶ Do not leave objects on the hot cooktop.

2.3 Safety instructions – installation

The device must only be installed and assembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

Work on electrical components must be conducted by trained electrical personnel.

The electrical safety of the appliance is only guaranteed if it is connected to a protective conductor system that has been installed in line with regulations. Ensure that this basic safety precaution is met.

Cooktop



DANGER!

Risk of electric shock!

Incorrect connection of the device to the mains voltage could cause electric shocks.

- ▶ Make sure that the device is firmly connected to the mains voltage.
- ▶ Make sure the device is connected to a properly installed earth conductor system.
- ▶ Make sure a system is installed which allows disconnection from the network with a contact opening width of at least 3 mm across all poles (circuit breaker, fuses, automatic circuit breakers, contactors).



DANGER!

Risk of electric shock!

If the mains connection cable comes into contact with hot hobs, it could get damaged. A damaged mains connection cable can cause a (deadly) electric shock.

- ▶ Make sure that the mains connection cable cannot come into contact with hot hobs.
- ▶ Make sure that the connection cable is not squashed or damaged.



CAUTION!

Lifting heavy loads can cause back injuries!

If not correctly handled, removing and installing the device can cause injuries to the limbs or torso.

- ▶ Removing the cooktop from the packaging is a two-person job.
- ▶ Placing the cooktop into the worktop cut-out is a two-person job.
- ▶ Use appropriate aids to prevent damage or injuries to limbs or torso.

Cooktop extractor



DANGER!

Risk of poisoning from combustion gases!

If the cooktop extractor is used in exhaust mode, it draws in air from the room in which it is installed as well as from neighbouring rooms. If there is insufficient air supply, low pressure will occur. Toxic gases could be drawn out of the fireplace that depends on the air in the room or extraction ducting and back into the room.

- ▶ Make sure that there is always a sufficient air supply.
- ▶ Only use approved and tested switchgear (e.g. window contact switch, low-pressure monitor) and have them approved by authorised specialists (certified chimney-sweep).



DANGER!

Risk of electric shock!

Incorrect stripping of the connection cable to external switching devices results in a risk of electric shock.

- ▶ Ensure that the stated stripping lengths are adhered to.

- ▶ Check the appliance for visible damage before installing it.
- ▶ Do not install damaged devices.
- A damaged device is a hazard.
- Repair work must only be carried out by specialists authorised by the manufacturer.

2.4 Safety instructions – disassembly and disposal

The device must only be disassembled by trained specialists who are familiar with and comply with the standard national regulations and supplementary regulations of the local utility companies.

Work on electrical components must only be conducted by trained electrical personnel.



DANGER!

Risk of electric shock!

Incorrectly disconnecting the appliance from the mains results in a risk of electric shock.

- ▶ Securely disconnect the appliance from the mains using LS switches, fuses, automatic circuit breakers or contactors.
- ▶ Use an authorised measuring device to ensure that there is no power to the appliance.



DANGER!

Risk of asphyxiation!

Packaging components (e.g. film, polystyrene) can be life-threatening for children.

- ▶ Store all packaging components out of reach of children.
- ▶ Dispose of the packaging properly and immediately.

2.5 Safety instructions – spare parts



WARNING!

Risk of injury and damage to property!

Incorrect components can lead to personal injury or damage to the appliance. Modifications, additions or alterations to the appliance can lead to safety risks.

- ▶ Only use original spare parts for repairs.

2.6 Intended use

The device cannot be used at altitudes above 2000 m (metres above sea level).

The device is designed exclusively for the preparation of food in private households. This appliance is not intended for:

- Outdoor use
- Installation in vehicles
- Heating rooms
- Use in non-stationary installation sites (e.g. on ships)
- Use with an external timer or a separate remote control system (remote operation)

Any use other than that specified in these operating and installation instructions or any use that goes beyond that which is described here is classed as unintended. BORA does not assume any liability for damages caused by improper use or incorrect operation.

All misuse is prohibited!

INFO

BORA Holding GmbH, BORA Vertriebs GmbH & Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH do not assume any liability for damage arising from non-adherence to the safety and warning information.

3 Technical data

Parameter	Value
Supply voltage	380-415 V
Frequency	50/60 Hz
Power consumption	7.6 kW
Fuse protection, minimum	1 x 32 A / 2 x 16 A
Total power	7.6 kW
Line-to-line voltage	AC 220-240 V / 50 Hz
Main dimensions	830 x 515 x 198 mm
Weight (incl. accessories/packaging)	Approx. 25 kg
Cooktop	
Front cooking zones	230 x 230 mm 2100 W
power setting	3700 W
Rear cooking zones	230 x 230 mm 2100 W
power setting	3700 W
Power levels	1-9, power setting
Cooktop energy consumption	
Cooking zone 1	182.2 (Wh/kg)
Cooking zone 2	181.1 (Wh/kg)
Cooking zone 3	182.2 (Wh/kg)
Cooking zone 4	181.1 (Wh/kg)
Total (average)	181.65 (Wh/kg)
Extraction system (BFIA)	
Maximum flow volume	697.3 m ³ /h
Maximum static pressure	372 Pa
Power control	1-9, power setting
Exhaust air connection (BFIA)	222 x 40 x 89 mm
Recirculation system (BFIU)	
Maximum flow volume	658.8 m ³ /h
Maximum static pressure	375 Pa
Power control	1-9, power setting
Recirculation connection (BFIU)	650 x 90 mm
Recirculation filter	
Filter area	2 x 0,4 m ²
Filter capacity	150 operating hours
Service life	1 year

Tab. 3.1 Technical data

4 Energy label

Product description			
Glass ceramic cooktop with 4 cooking zones and an integrated cooktop extractor	BFIA	BFIU	
Operating mode	Exhaust air	Recirculation	
Energy consumption	Value	Value	EN standard
Annual energy consumption (AEC_{hood})	54,8 kW/a	51,9 kW/a	61591
Energy efficiency class	B	*	61591
Flow volume			
Fluid dynamic efficiency (FDE_{hood})	23.1	21.0	61591
Fluid dynamic efficiency class	B	*	61591
Lighting			
Lighting efficiency (LE_{hood})	* lx/Watt	* lx/Watt	*
Lighting efficiency class	*	*	*
Grease filtering			
Level 9 maximum (GFE_{hood})	91 %	91 %	61591
Class level 9 normal	B	*	61591
Grease filtering (additional details)			
Level P maximum (GFE_{hood})	93 %	93 %	61591
Class level P maximum	B	*	61591
Flow volume			
Air flow level 1 minimum	194.8 m ³ /h	* m ³ /h	61591
Air flow level 9 normal	607.3 m ³ /h	* m ³ /h	61591
Air flow level P maximum (Q_{max})	697.3 m ³ /h	658.8 m ³ /h	61591
Sound power level			
Level 1 minimum	40 dB(A)	39 dB(A)	60704-2-13
Level 9 normal	66 dB(A)	67 dB(A)	60704-2-13
Level P maximum	70 dB(A)	70 dB(A)	60704-2-13
Sound pressure level (additional details)			
Level 1 minimum	27 dB(A)	26 dB(A)	**
Level 9 normal	54 dB(A)	54 dB(A)	**
Level P maximum	57 dB(A)	57 dB(A)	**
Details according to 66/2014			
Power consumption in off mode (P_o)	< 0.5 W	< 0.5 W	61591
Time increase factor	1.2	1.2	61591
Energy efficiency index (EEl_{hood})	65.2	64.5	61591
Air flow rate at the best efficiency point (Q_{BEP})	382 m ³ /h	311.4 m ³ /h	61591
Pressure at the best efficiency point (P_{BEP})	272 Pa	288 Pa	61591
Electric power input at the best efficiency point (W_{BEP})	125 W	118.5 W	61591

Tab. 4.1 Energy label information

(The recirculation information is optional and not subject to mandatory inclusion on the label)

* This specification is not applicable for this product.

** The sound pressure level has been determined from a distance of 1 m (distance-dependent level recording) on the basis of the sound power level established in EN 60704-2-13.

5 Device description

Observe all safety and warning information during operation (see the Safety chapter).

The cooktop with cooktop extractor has the following features:

Cooktop:

- Automatic heat up function
- Safety shut-down
- Bridging function
- Electronic power control (9 power levels)
- Childproofing feature
- Pause function
- power setting
- Residual heat display
- Timer functions
- Pan size recognition
- Heat retention levels

Cooktop extractor:

- Freely adjustable power control
- Automatic cooktop extractor function
- Automatic after-run
- Safety shut-down
- Filter service display
- Interface communication

Depending on what you opted for when purchasing, the cooktop extractor can be operated as an exhaust air or an recirculating air version.



Exhaust mode

The air extracted from the cooktop is cleaned by the stainless steel grease filter and released outside through a duct system.

The exhaust air must not be expelled into:

- a smoke or exhaust gas flue that is in operation;
- a shaft used for the aeration of rooms where fireplaces are installed.

If the exhaust air is to be directed into a smoke or exhaust gas flue that is not in use, the installation must be checked and approved by the responsible heating engineer.



Recirculation mode

The air suctioned away by the cooktop is purified by the stainless steel grease filter and an activated charcoal filter and fed back into the room in which the appliance is installed. To prevent odours in the recirculated air, an activated charcoal filter must be used. For hygiene and health

reasons, the activated charcoal filter must be replaced at the recommended intervals (see the Cleaning and maintenance section).

INFO In recirculation mode, ensure sufficient ventilation and aeration to expel humidity.

The activated charcoal filter is equipped with an integrated fine filter. The filter in the activated charcoal filter is made from special activated charcoal, which is ideal for trapping cooking odours.

5.1 Structure

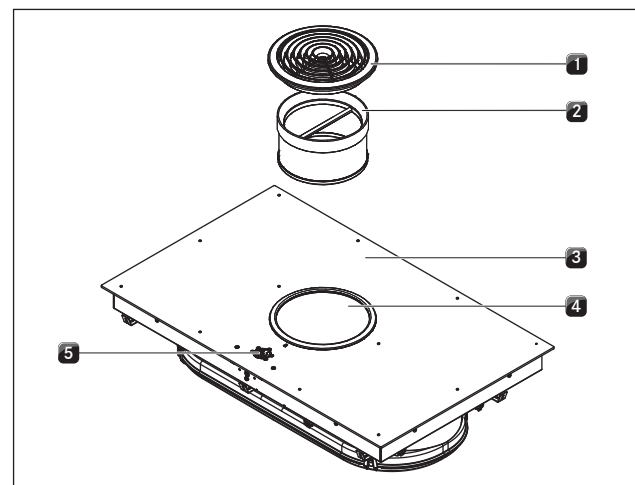


Fig. 5.1 Cooktop

- [1] Air inlet nozzle
- [2] Stainless steel grease filter
- [3] Cooktop
- [4] Suction opening
- [5] Operating panel

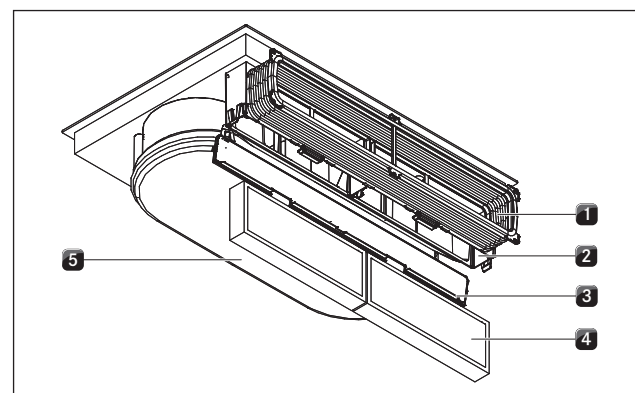


Fig. 5.2 Cooktop extractor – recirculation (BFIU)

- [1] Flexible duct
- [2] Activated charcoal filter housing
- [3] Activated charcoal filter housing cover
- [4] Activated charcoal filter
- [5] Air guiding housing with housing base

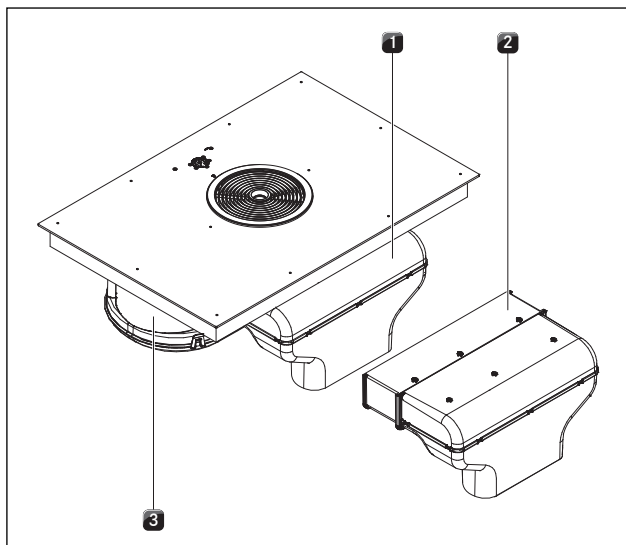


Fig. 5.3 Cooktop extractor – exhaust air (BFIA)

- [1] Exhaust air arc with duct connection
- [2] Horizontal exhaust air extension
- [3] Air guiding housing with housing base

5.2 Operating panel and operating principle

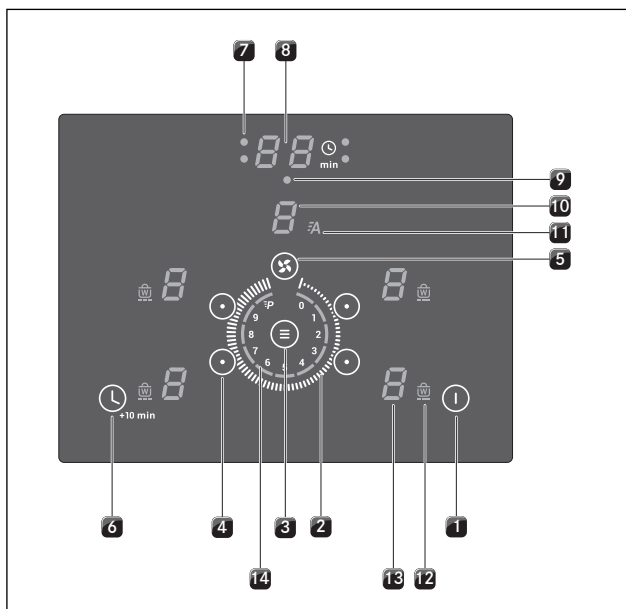


Fig. 5.4 Operating panel

Sensor buttons:

- [1] Switching the cooktop/cooktop extractor on/off
- [3] Multi-function button
- [6] Activating the timer
- [6] Setting the timer value (+10 min)

Setting ring:

- [2] Adjusting the power level
- [2] Setting the timer value (minutes)
- [2] Locking/unlocking the childproofing feature
- [2] Locking/unlocking the pause function
- [4] Selecting the cooking zone
- [5] Selecting the cooktop extractor

Display fields:

- [7] Automatic cut-off timer control light
- [8] Timer display
- [9] Short-time timer control light
- [10] Fan display/filter service display
- [11] Automatic cooktop extractor display
- [12] Heat retention level display
- [13] Cooking zone indicator
- [14] Power display

Display field	Display	Meaning
Fan display		Fan off
	<i>1 - 9</i>	Power level
	<i>P</i>	Power setting
	<i>n</i>	Automatic after-run
	<i>F</i>	Filter service display
Automatic cooktop extractor function	<i>A</i>	Active
Cooking zone indicator	<i>1 - 9</i>	Power level
	<i>P</i>	Power setting
	<i>A</i>	Automatic heat up function
	<i>L</i>	Childproofing feature
	<i>n</i>	Bridging function
	<i> </i>	Break
	<i>-</i>	Heat retention level 42°C
	<i>=</i>	Heat retention level 74°C
	<i>≡</i>	Heat retention level 94°C
	<i>U</i>	No cookware or cookware is too small.
<i>H</i>	Residual heat display: Cooking zone is switched off but still hot (temperature > 60°C)	
Heat retention level display	On	Active
Timer control light	On	Active
	Flashes	Timer on (); no time set
	Off	Timer off
Timer display	<i>01 - 99</i>	Set minutes for short time (egg timer) or automatic cut-off
	<i>00</i>	Timer on; no time set

Tab. 5.1 Meaning of displays

Touch control

The operating panel is fitted with electronic sensor buttons, a setting field and display panels. The sensor buttons respond to finger contact.

You operate the device by touching the corresponding sensor button with your finger. Keep the finger pressed on the sensor button until you either hear an acoustic signal or the display changes accordingly.

5.3 Functional principle of the cooking zone


An induction coil is located underneath an induction cooking zone. If the cooking zone is switched on, this coil creates a magnetic field that acts directly on the base of the pot thus heating it up. The cooking zone is only indirectly heated up by the heat emitted by the pot. Cooking zones with induction only work if the cookware has a magnetisable base.

The induction automatically takes into account the size of the cookware used so that only the area in the cooking zone covered by the base of the pot is heated up.

► Observe the minimum pot base diameter.

The cooking zone does not work

- if it is switched on without cookware or with unsuitable cookware;
- if the base diameter of the cookware is too small;
- if the cookware is removed from a switched on cooking zone.

A  will appear in the cooking zone indicator if cookware that is unsuitable or too small is used.

5.3.1 Power levels

The high power output of induction cooktops results in the very quick heating up of cookware. A slight adjustment is needed in comparison to conventional cooking systems when selecting the power level in order to avoid burning food.

Activity	Power level
Melting of butter and chocolate, breaking up gelatine	1
Keeping sauces and soups warm, soaking rice	1-3
Cooking potatoes, pasta, soups, ragouts, steaming fruit, vegetables and fish, defrosting food	2-6
Frying in coated pans, moderate frying (without overheating the fat) of pork cutlets, fish	6-7
Heating up fat, browning fish, cooking thickened sources and soups, making omelettes	7-8
Cooking large quantities of liquid, browning steaks	9
Heating up water	P

Tab. 5.2 Recommendations for power levels

The specifications provided in the table are standard values.

Depending on the cookware and filling quantity, it is recommended to either decrease or increase the power level.

5.3.2 Automatic heat up function

The cooking zones are equipped with an automatic heat up function that can be switched on and off.

■ The display shows .


This function enables the cooking zone to work at full power for a certain duration after switching on. After this time, the power level is automatically switched back to the power level set.

Automatic heat up function								
Power level	1	2	3	4	5	6	7	8
Cooking duration in min./sec	0:48	2:24	3:50	5:12	6:48	2:00	2:48	3:36

Tab. 5.3 Overview of the automatic heat up function

5.3.3 power setting

All cooking zones are equipped with a power-enhancing power setting.

The power setting can be used in order to quickly heat up large quantities of water. If the power setting is activated, the cooking zones will run at extra high power. After 10 minutes, the cooking zone is automatically switched to power level .

 
If the bridging function is activated, the power setting cannot be used.

If cooking zone overheating protection is activated, the power setting cannot be activated. The display flashes for 3 seconds and then switches back.

INFO Never heat up oil, fat and the like at this power setting. The bottom of the pan can overheat due to the high power output.

5.3.4 Heat retention levels

The heat retention level keeps cooked foods warm at different temperatures.

 
- The heat retention level display is active and lit.
- The heat retention level is shown in the cooking zone indicator e.g. for level 2 .
- The maximum duration for the warming function is limited to 8 hours.

Heat retention level	Temperature in °C
Level 1	42 °C
Level 2	74 °C
Level 3	94 °C

Tab. 5.4 Heat retention levels

5.3.5 Bridging function


The two side cooking zones can be operated as a connected cooking zone at the same power level.

- The display shows .

The bridging function is suitable for heating food in a roaster.

5.3.6 Pause function

The cooking session can be temporarily interrupted.

-  appears in the display.
- The cooking session and set timer are interrupted while the pause function is active.
- The pause function is limited to a maximum duration of 10 minutes.


5.3.7 Timer functions

You can use 2 timer functions:

- Short-time timer (egg timer), no automatic switching off of a cooking zone.
- Automatic cut-off for automatically switching off a cooking zone.

5.3.8 Pan size recognition

The cooking zone does not work

- if  is shown in the display;
- if it is switched on without cookware or with unsuitable cookware;
- if the base diameter of the cookware is too small;
- if the cookware is removed from a switched on cooking zone.
- After 10 minutes have passed without a pan being detected, the cooking zone will switch off automatically.

5.3.9 Suitable cookware

INFO The heating and heat through time for the base of the cookware as well as the cooking results are significantly influenced by the structure and material of the cookware.



Cookware with this symbol is suitable for induction cooktops.

The cookware used for the induction cooktop must be made of metal, feature magnetic properties and possess a sufficient bottom surface.

Suitable cookware is made of:

- stainless steel with a magnetisable base
- enamelled steel
- cast iron

Cooking zone	Minimum diameter
Front	120 mm
Back	120 mm

Tab. 5.5 Minimum cookware diameter

- ▶ Perform a magnet test, if necessary. If a magnet sticks to the base of the utensils, they are normally induction compatible.
- ▶ Pay attention to the cookware bottom. The base of the cookware should not show any sign of curvature. Due to incorrect temperature monitoring of the hob caused by the air gap between the cookware and the temperature sensor underneath the hob, overheating may occur. The bottom of the cookware must not have any sharp grooves or sharp edges to avoid scratching the cooktop.
- ▶ Place the cookware (without a mat or similar) directly onto the glass ceramic.

Noises

The following noises may occur in the cookware when using induction cooking zones, depending on the material and the finish of the base:

- **Humming** may occur when using a high power level. It decreases or disappears if the power level is decreased.
- **Crackling or whistling** may occur due to the bases of cookware made of different materials (e.g. sandwich base).
- **Clicking sounds** may occur during electronic switching procedures especially at low power levels.
- **Whirring** may occur when the cooling fan is switched on. In order to increase the service life of the electronic system, the cooktop is equipped with a cooling fan. The cooling fan switches on automatically if the cooktop is used intensively. You will hear a whirring sound. The cooling fan may continue running after the device has been switched off.

5.4 Functional principle of the cooktop extractor

5.4.1 Freely adjustable power control

The power levels are controlled using the central setting field on the operating panel.

5.4.2 Automatic cooktop extractor function

The automatic cooktop extractor function adjusts the extraction performance (power level) to the highest cooking zone cooking level used.

Function	Power levels									
Extractor level	4	4	4	4	5	6	7	8	9	P
Cooking level	1	2	3	4	5	6	7	8	9	P

Tab. 5.6 Extraction performance and cooking level

- If the power level of the cooking zones is changed, the automatic cooktop extractor function adjusts the cooktop extractor performance after a 30 second delay.
- Once the cooking session is complete, the automatic after-run is activated.

5.4.3 Power setting

The cooktop extractor has a power-enhancing power setting.

This power setting makes it possible to suction away high levels of cooking vapours more quickly. After 10 minutes, the power setting is automatically switched to power level 9.

5.4.4 Automatic after-run

The cooktop extractor continues to run at a lower level η and switches off automatically after 20 minutes.

5.4.5 Filter service display

The filter service display becomes active after the cooktop extractor has operated for 150 hours. The activated charcoal filters have reached the end of their service life (with recirculation only) and the stainless steel grease filter needs to be thoroughly cleaned.

■ A flashing F is displayed in the filter service display.

5.4.6 Interface communication

The internal interface can be used for extended control options. This has a Home-In and a Home-Out contact (see Installation chapter).

■ The Home-In contact can be used for the incoming signal from external switch devices (e.g. window contact switch).

■ The Home-Out contact can be used to control external installations.

5.5 Safety devices

5.5.1 Residual heat display

INFO While H is displayed in the cooking zone indicator (residual heat display), do not touch the cooking zone or place any heat-sensitive objects on top of it. Risk of burns and fire!

After switching it off, the cooking zone remains hot. H is displayed in the cooking zone indicator (residual heat display). The cooking zone indicator will go out after sufficient cooling time (temperature < 60°C).

5.5.2 Safety shut-down

Cooking zone

Each cooking zone is switched off automatically when the cooking zone exceeds the maximum operating duration at a power level. H (residual heat display) is then displayed in the cooking zone indicator.

Heat retention level	Power level	Switch off after hours
1		8.0
2		8.0
3		8.0
	1	8.4
	2	6.4
	3	5.2
	4	4.2
	5	3.3
	6	2.2
	7	2.2
	8	1.5
	9	1.3
	P	0.2

Tab. 5.7 Overview of the safety shut-down

► Switch the cooking zone back on (see Operating control) if you want to put the cooking zone back into operation.

Cooktop extractor

The cooktop extractor switches off automatically if no buttons are pressed for 120 minutes.

5.5.3 Cooking zone overheating protection

All induction coils plus the cooling elements of the electronics are equipped with overheating protection. Before the induction coils and/or cooling elements overheat, the overheating protection will initiate one of the following measures:

■ The power setting P is automatically switched to power level 9 after 10 minutes. The cooking zone indicator P switches to 9.

■ The set power level is reduced.

■ The cooking zones switch off automatically.

H (residual heat display) is displayed in the cooking zone indicator if the cooking zone is still hot.

5.5.4 Automatic switch-off if the button is pressed and held

The cooktop will be switched off automatically when one or more sensor buttons are touched for longer than 10 seconds (finger contact, objects, soiling).

■ After a few seconds, the cooktop will switch off.

► Remove the finger or object from the cooktop.

► Clean the cooktop as required.

► Where necessary, switch the cooktop back on.

5.5.5 Childproofing feature

The childproofing feature prevents the cooktop from being switched on accidentally. The childproofing feature can only be activated when the cooktop is switched on and all cooking zones are switched off (see the Operation chapter).

6 Installation

- ▶ Observe all safety and warning information (see the Safety chapter).
- ▶ Follow the enclosed manufacturer's information.

INFO The power supply cable must be provided by the customer.

INFO The device must not be installed above cooling devices, dishwashers, stoves, ovens, washing machines or dryers.

INFO The contact surfaces of the worktops and wall sealing strips must be made of a heat-resistant material (up to approx. 100°C).

INFO Worktop cut-outs must be moisture-sealed using suitable means and, where necessary, fitted with a thermal insulator.

6.1 Checking the scope of delivery

Name	Quantity
Surface induction glass ceramic cooktop with cooktop extractor	1
Stainless steel grease filter	1
BAKF activated charcoal filter	2
Flexible duct (BFIU only)	1
EURO screws (BFIU only)	6
BLAVH horizontal exhaust air extension (BFIA only)	1
Mounting straps	5
Sealing tape	1
Glass ceramic scraper	1
Cable routing clips	3
Protective hose	2
Cable tie	2
Operating and installation instructions	1
Lenshead screw	5
Drilling template (BFIU only)	1
Height adjustment plate set	2

Tab. 6.1 Scope of delivery

- ▶ Check the scope of delivery for damage and make sure it is complete.
- ▶ If there are any missing or damaged parts, please notify BORA After Sales Service immediately.
- ▶ Do not under any circumstances install parts which are damaged.
- ▶ Dispose of transport packaging in the proper manner (see the Decommissioning, Disassembly and Disposal chapter).

6.2 Tool and aids

The following tools are required for the correct installation of the cooktop:

- Pencil
- Standard or cordless drill with a 5 mm wood drill (for the rear wall)
- Compass saw or hand saw
- Drilling template for cut-out on rear wall (included in scope of delivery)
- Phillips screwdriver Z2
- Silicone sealant for sealing cutting surfaces

6.3 Assembly instructions

6.3.1 Safety distances

- ▶ Maintain the following safety distances:

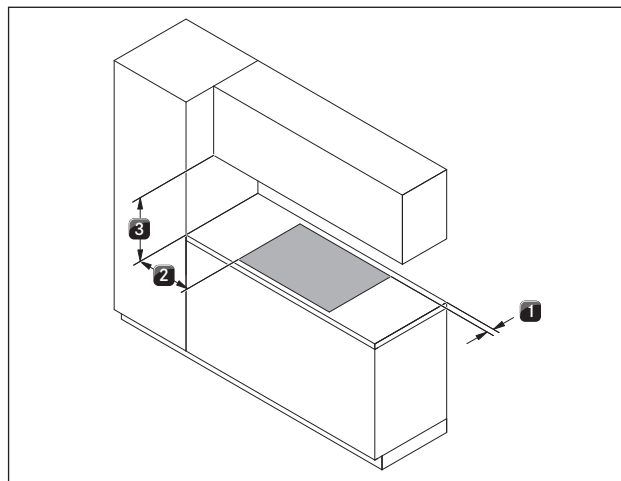


Fig. 6.1 Recommended minimum clearances

- [1] Rear minimum clearance of 50 mm between the worktop cut-out and the rear corner of the worktop.
- [2] Minimum clearance of 300 mm from the left and right of the worktop cut-out to the adjacent cabinet or wall.
- [3] Minimum clearance of 600 mm between the worktop and the wall unit. A minimum clearance of 1000 mm is recommended for ergonomic reasons.

6.4 Cut-out dimensions for the cooktop

Preparing the worktop

- ▶ Create the worktop cut-out taking into account the specified cut-out dimensions.
- ▶ Make sure that the cutting surfaces of the worktops are properly sealed.
- ▶ Comply with the instructions of the worktop manufacturer.

- Cross bars on the kitchen unit in the area of the worktop cut-out may need to be removed.
- No false floor is necessary below the cooktop with cooktop extractor.
- Make sure that the area below the device is sufficiently ventilated.
- An opening cross-section of > 50 cm² must be available at the front and in the false floor for the ventilation of the cooktop's induction equipment.
- The drawers and/or shelves in the floor unit must be removable.
- A return flow aperture > 500 cm² is required in the kitchen units for recirculation appliances (e.g. by shortening the plinth boards or using suitable slatted plinths).
- The power socket is located at the bottom of the front of the device.

Flush installation

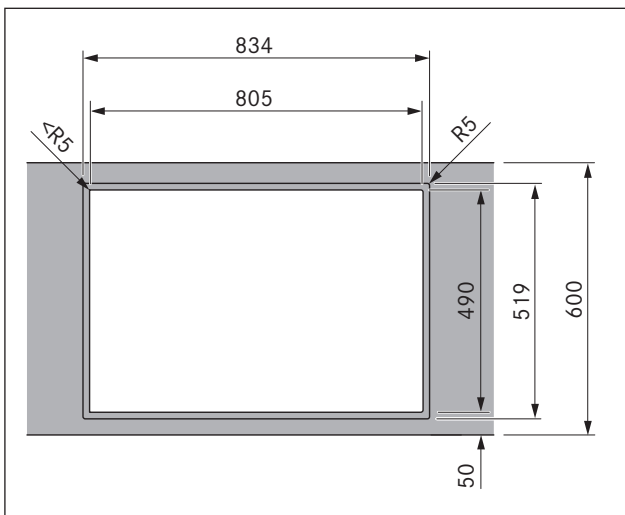


Fig. 6.2 Cut-out dimensions for flush installation

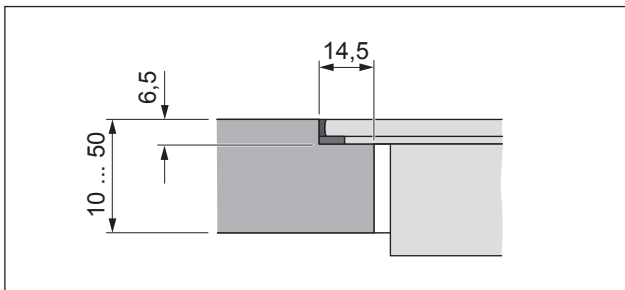


Fig. 6.3 Dimension of groove for flush installation

Surface mounting

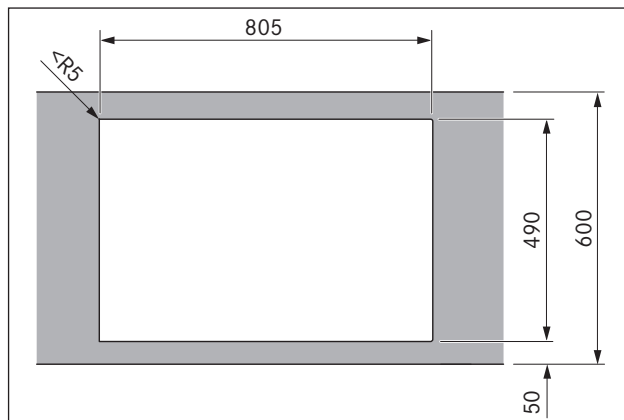


Fig. 6.4 Cut-out dimensions for surface mounting

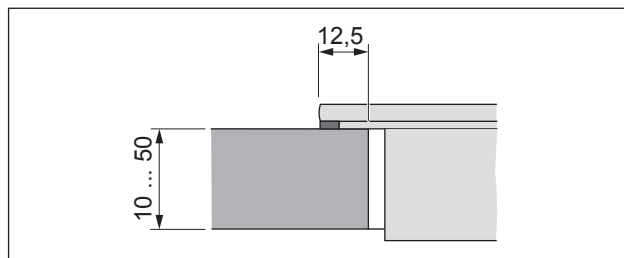


Fig. 6.5 Dimension of support for surface mounting

Attaching the sealing tape

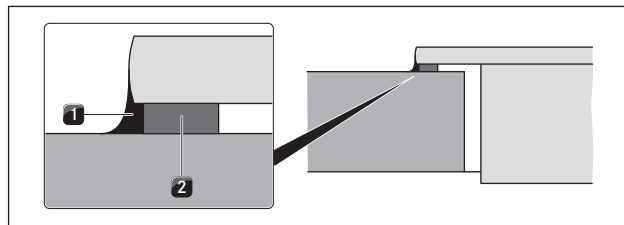


Fig. 6.6 Sealing tape with surface mounting

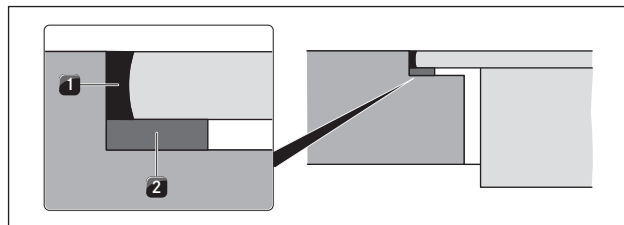


Fig. 6.7 Sealing tape, flush installation

- [1] Black heat-resistant silicone sealing compound
- [2] Sealing tape

- ▶ With surface mounting, attach the enclosed sealing tape [2] to the underside of the cooktop before installing it. Do not leave any gaps.
- ▶ With flush installation, attach the enclosed sealing tape [2] to the horizontal cutting edge in the worktop cut-out, even if you are sealing the cooktop with a silicone sealing compound [1] or similar.
- ▶ Precisely align the cooktop.

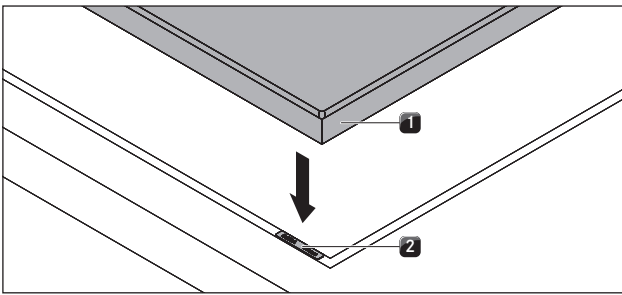


Fig. 6.8 Height adjustment plates

- [1] Cooktop
- [2] Height adjustment plate

- ▶ If applicable, insert the height adjustment plate [2].
- ▶ Note down the type designation and build number of the cooktop (FD number) on the back of this manual. Both details can be found on the nameplate on the underside of the cooktop.

6.5 Installing the recirculation version (BFIU)

INFO A minimum clearance of 25 mm must be provided for the vertical return flow aperture.

INFO A return flow aperture of at least 500 cm² must be provided.

If the cooktop extractor is used exclusively in recirculation mode, operation with an open fireplace is possible without any additional safety measures.

Installation dimensions

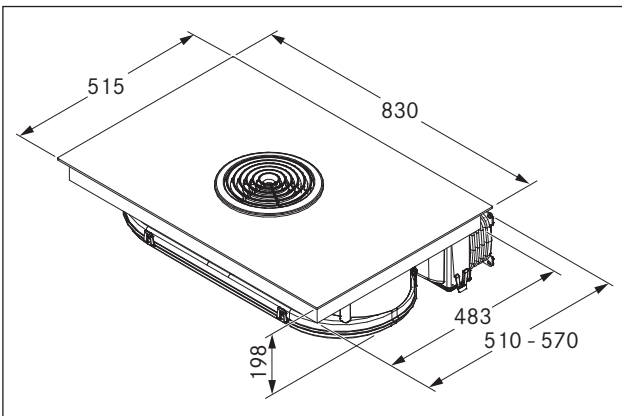


Fig. 6.9 Device dimensions for recirculation

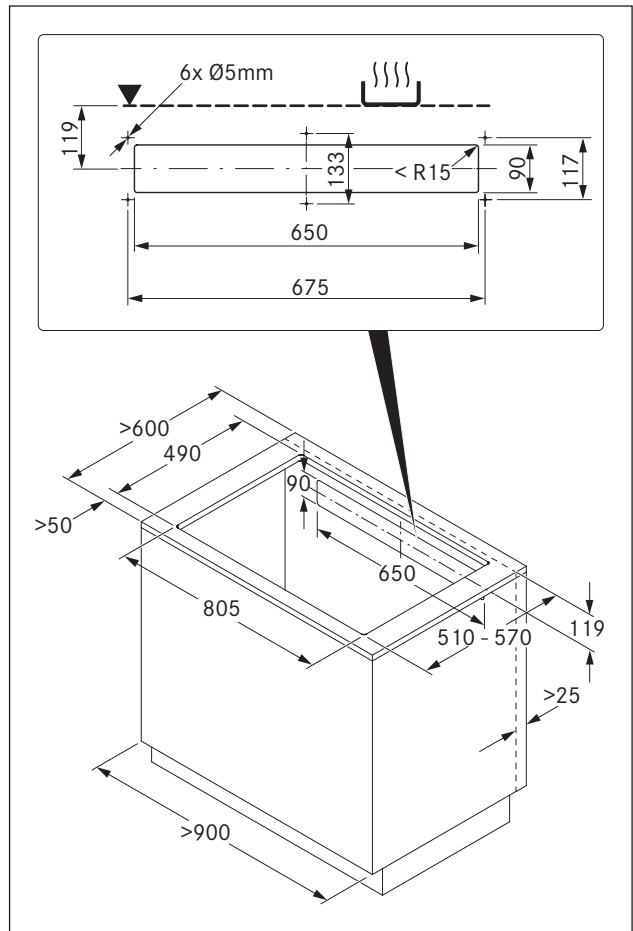


Fig. 6.10 Furniture dimensions for recirculation

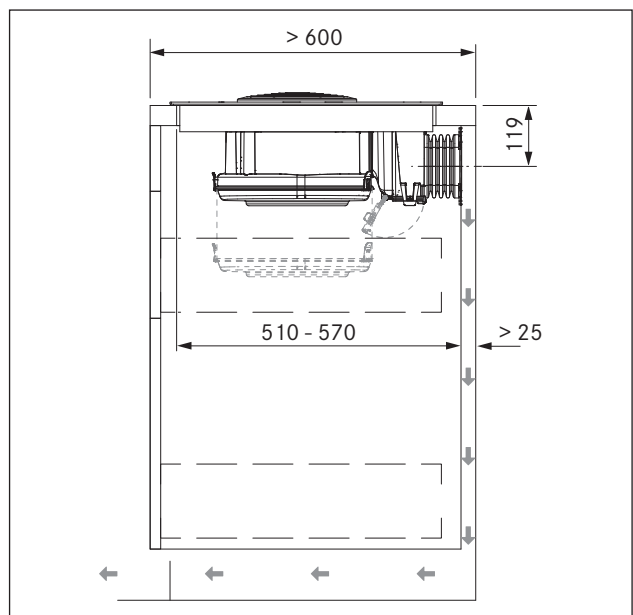


Fig. 6.11 Installation dimensions for recirculation, depth of worktop 600 mm

- The floor unit must have a continuous back wall so that the recirculation air is not directed into the front furniture body compartment.
- There must be a cut-out in the back wall.

- A minimum clearance of 25 mm between the back furniture body wall and an adjacent kitchen unit or room wall must be observed for the return flow aperture.

Preparing the back wall of the kitchen unit

- ▶ Adjust the back wall according to the required installation dimensions.
- ▶ If applicable, move the back wall.
- ▶ If necessary, extend the height of the back wall so that the unit is closed to the front.

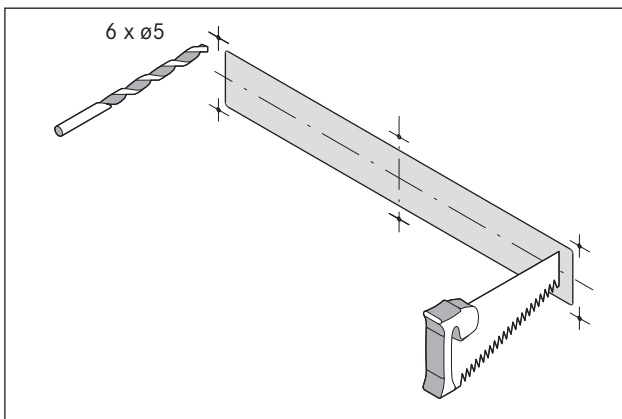


Fig. 6.12 Cut-out and connection requirements

- ▶ In the middle of the cooktop, use the drilling template provided to mark the return flow aperture and the connection drill holes in accordance with the installation dimensions.
- ▶ Saw out the return flow aperture.
- ▶ Drill the connection drill holes.
- ▶ Decrease the height of the skirting boards or create corresponding openings in the plinth.

Screwing on the flexible duct

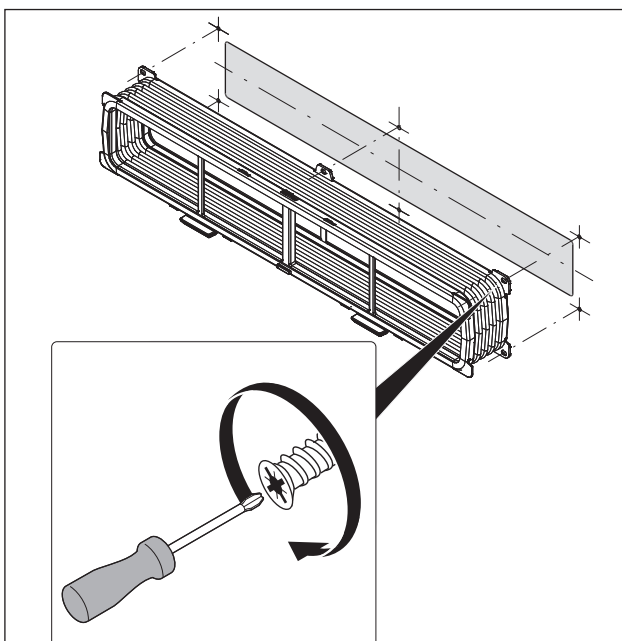


Fig. 6.13 Flexible duct with 6 EURO screws 6.3 x 10 mm

- ▶ Use a screwdriver (not an electric screwdriver) to screw the flexible duct to the back wall of the kitchen unit until it is hand-tight.

Inserting the cooktop

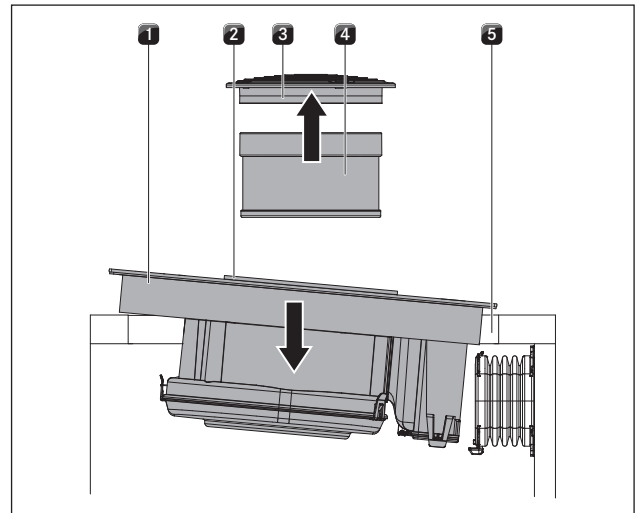


Fig. 6.14 Insert the cooktop obliquely

- [1] Cooktop
- [2] Suction opening
- [3] Air inlet nozzle
- [4] Stainless steel grease filter
- [5] Worktop cut-out

- ▶ Before inserting the cooktop, remove the air inlet nozzle [3] and the stainless steel grease filter [4].
- ▶ Use the suction opening as a handle during insertion.
- ▶ Insert the cooktop obliquely into the worktop cut-out [5].

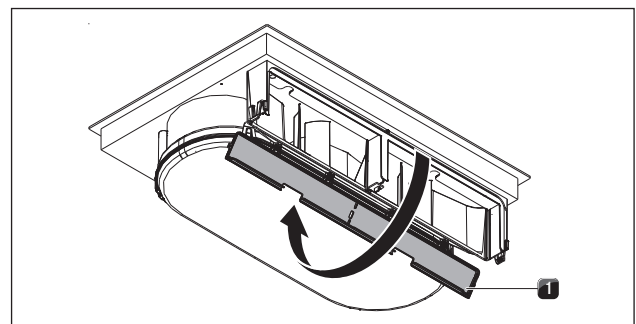


Fig. 6.15 Opening the housing cover

- [1] Housing cover of the activated charcoal filter

- ▶ Open the housing cover of the activated charcoal filter [1] from below.

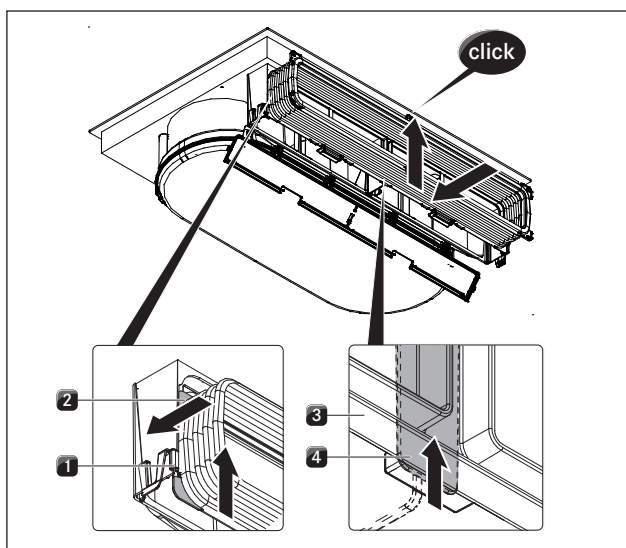


Fig. 6.16 Mounting the frame of the flexible duct

- [1] Retaining groove of the housing of the activated charcoal filter
- [2] Position shackles
- [3] Flexible duct frame
- [4] Lower lock

- ▶ Insert the frame of the flexible duct into the retaining groove on the housing of the activated charcoal filter [1].
- ▶ Ensure that both lateral position shackles [2] are in the guide.
- ▶ Slide the frame upward [3] until the lower [4] and upper lock engage in the middle.
- ▶ Ensure that the frame is inserted into the housing groove [1] all round.

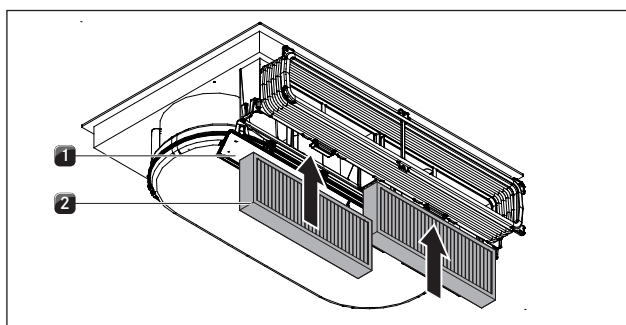


Fig. 6.17 Inserting the activated charcoal filter

- [1] Housing cover of the activated charcoal filter
- [2] Activated charcoal filter

- ▶ Remove the packaging from the activated charcoal filters.
- ▶ Insert the two activated charcoal filters [2] from below.
- ▶ Check the direction of flow of the filters. This is identified by an arrow.
- ▶ Close the housing cover [1].

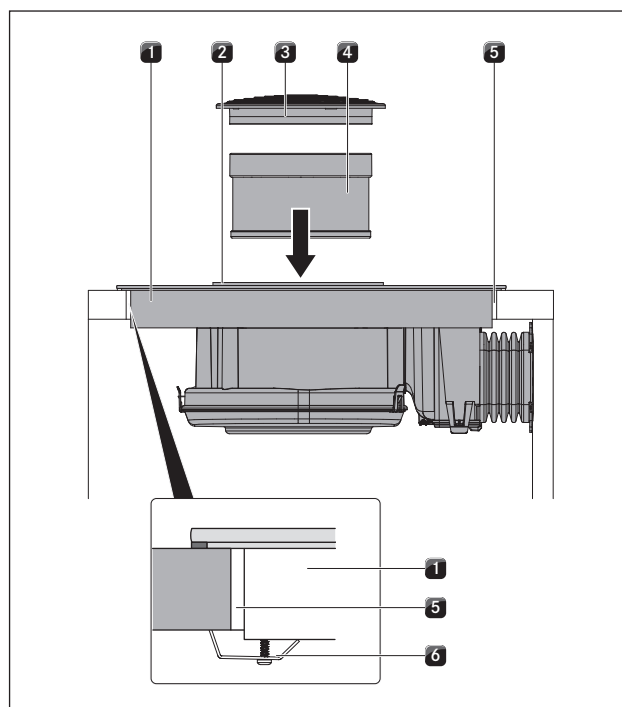


Fig. 6.18 Securing the cooktop in the middle

- [1] Cooktop
- [2] Suction opening
- [3] Air inlet nozzle
- [4] Stainless steel grease filter
- [5] Worktop cut-out
- [6] Mounting bracket

For surface mounting

- ▶ Make sure that the sealing tape for the cooktop is flat against the worktop.

For flush installation

- ▶ Make sure that the sealing tape of the cooktop is sealed well all the way round.
- ▶ If applicable, insert the height adjustment plate.
- ▶ Fasten the cooktop to the worktop using the mounting brackets [6].
- ▶ Next, insert the stainless steel grease filter [4] and the air inlet nozzle [3].
- ▶ Seal the surrounding gap with black, heat-resistant silicone sealant.

6.6 Installing the exhaust air version (BFIA)

INFO The state and regional laws and regulations must be observed with regard to the exhaust duct design. A sufficient air supply must be ensured.

6.6.1 Operating the cooktop extractor with a fireplace that depends on the air in the room

Fireplaces that depend on the air in the room (e.g. gas, oil, wood or coal-fired heaters, continuous-flow water heaters, instantaneous water heaters) draw in air from the room in which they are installed and release the exhaust fumes into the outside air via an exhaust system (e.g. chimney).

If the cooktop extractor is used in exhaust mode, it draws in air from the room in which it is installed as well as from neighbouring rooms. If there is insufficient air supply, low pressure will occur. Toxic gases could be drawn out of the chimney or extraction ducting and back into the room.

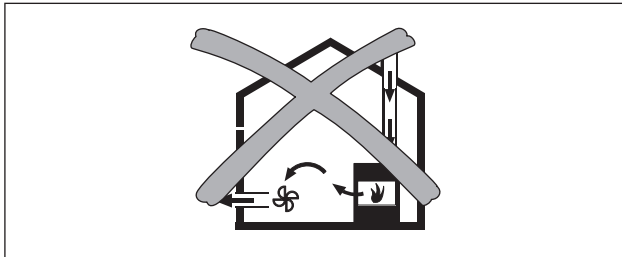


Fig. 6.19 Exhaust air installation – not permitted

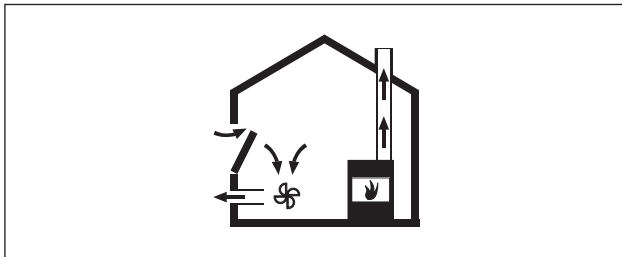


Fig. 6.20 Exhaust air installation – correct

- ▶ If simultaneously operating both a fireplace and the cooktop extractor in the same room, ensure that:
 - the maximum low pressure is 4 Pa (4×10^{-5} bar);
 - a safety device (e.g. window contact switch, low pressure warning device) is used to ensure that a sufficient supply of fresh air is guaranteed;
 - the exhaust air is not be ducted into a chimney that is used for exhaust gases of devices operated with gas or other combustibles;
 - the installation is checked and approved by an authorised certified engineer (e.g. heating engineer).

Installation dimensions

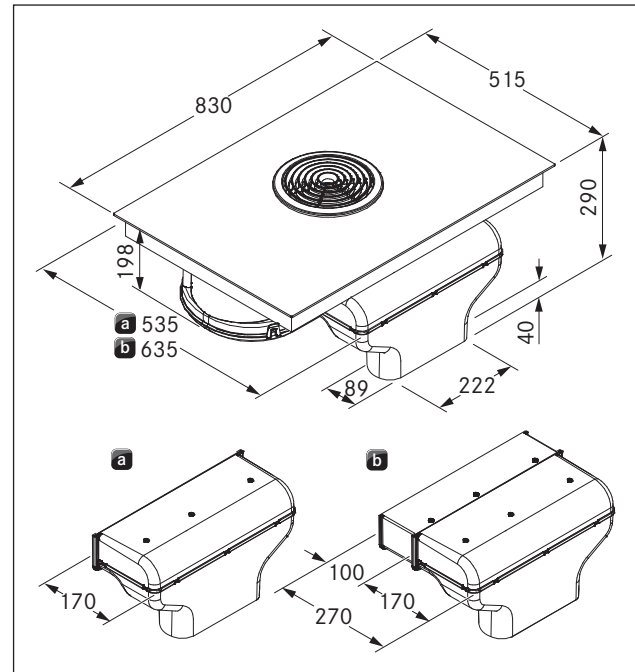


Fig. 6.21 Device dimensions with exhaust air

- [a] Device dimensions without cable extension
- [b] Device dimensions with cable extension

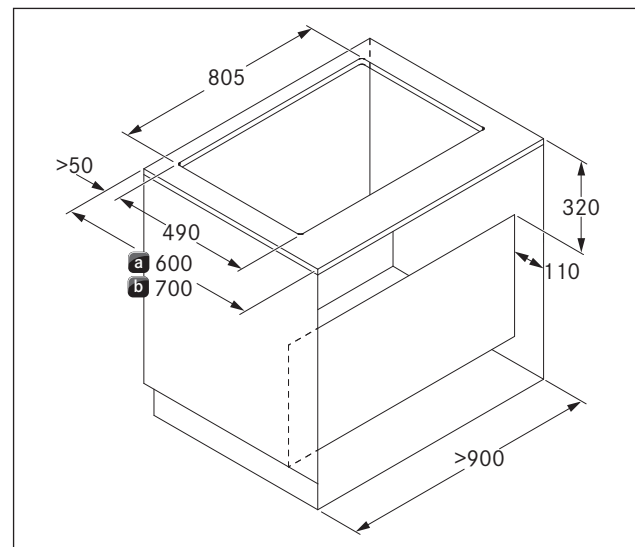


Fig. 6.22 Kitchen unit dimensions with exhaust air

- [a] Worktop depth from 600 mm
- [b] Worktop depth from 700 mm

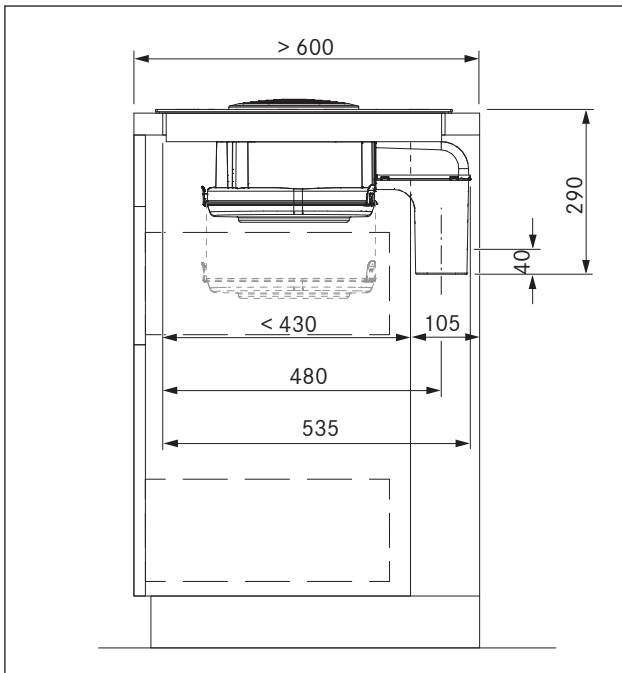


Fig. 6.23 Installation dimensions for exhaust air, worktop depth 600 mm

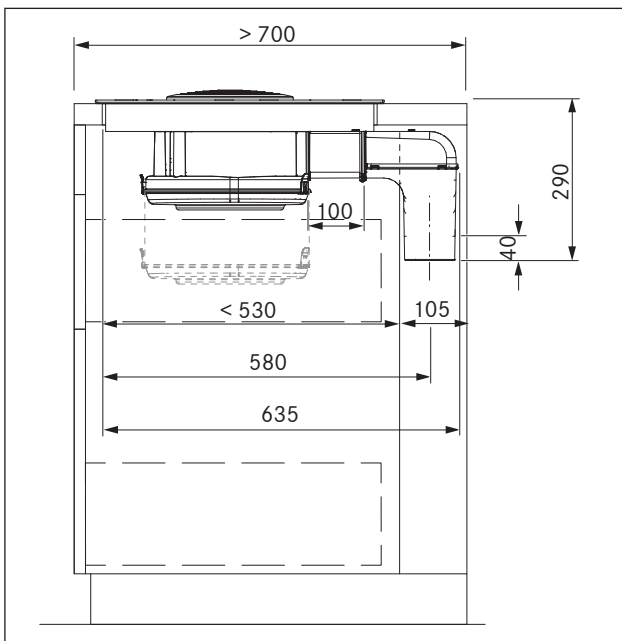


Fig. 6.24 Installation dimensions for exhaust air, worktop depth from 700 mm

Installation conditions

- The back wall of the floor unit must be adjusted for the exhaust air duct.
- A minimum clearance of 110 mm between the back furniture body wall and an adjacent kitchen unit or room wall must be observed for the air duct.
- The exhaust air must be directed to the outside in appropriate exhaust air ducts.
- The minimum cross-section of the air ducts must be 176 cm². This corresponds to a round pipe with a diameter of 150 mm.

- The maximum exhaust air duct length is 6 m.
- Planning instructions for the installation of the exhaust air ducts are provided in the BORA ventilation handbook.

Preparing the back wall of the kitchen unit

- ▶ Before installation, check the suitability of floor unit with regard to the necessary installation dimensions for the device and the planned duct system.
- ▶ If necessary, adjust the position of the back wall according to the required installation dimensions.

Extending the exhaust air duct

INFO The exhaust air duct can optionally be extended by 100 mm to the rear using the supplied horizontal extension BLAVH.

- ▶ Remove the air inlet nozzle and the stainless steel grease filter.
- ▶ Insert the cooktop with the glass ceramic panel facing downward on a clean and soft surface (e.g. cardboard, packaging material) in order to avoid damage to the glass ceramic panel.

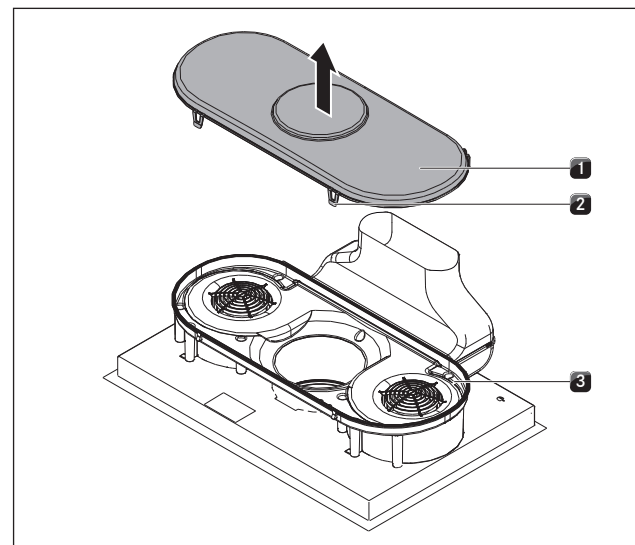


Fig. 6.25 Removing the housing base

- [1] Housing base
- [2] Locks
- [3] Air guiding housing

- ▶ Open the 4 locks [2].
- ▶ Remove the housing base [1] from the air guiding housing [3].

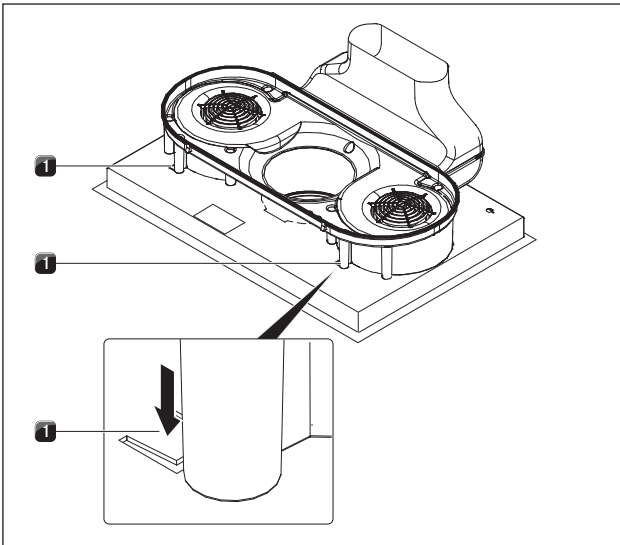


Fig. 6.26 Unlocking the position lock

[1] Shackles for position lock

- Use a screw driver to press the shackles left and right [1] downward to unlock the position lock.

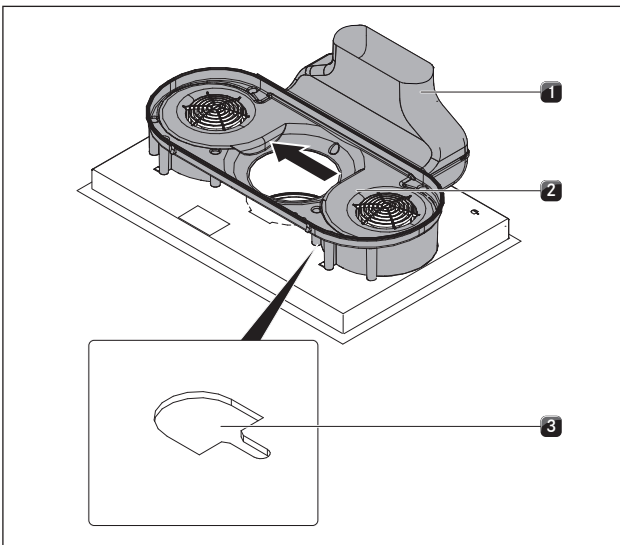


Fig. 6.27 Moving the air guiding housing

[1] Exhaust air arc
[2] Air guiding housing
[3] Insertion aperture

- Move the air guiding housing [2] laterally together with the exhaust air arc [1] to the left edge of the insertion aperture [3].

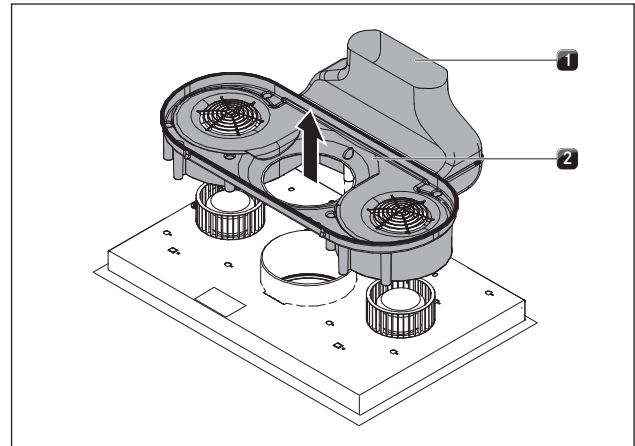


Fig. 6.28 Removing the air guiding housing

[1] Exhaust air arc
[2] Air guiding housing

- Remove the air guiding housing [2] with the exhaust air arc [1] upward.

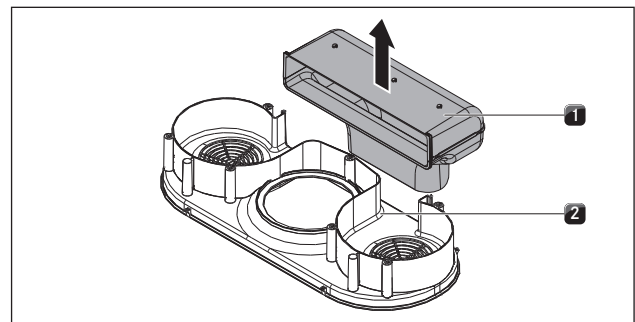


Fig. 6.29 Removing the exhaust air arc

[1] Exhaust air arc
[2] Air guiding housing

- Remove the exhaust air arc [1] from the air guiding housing [2] upward.

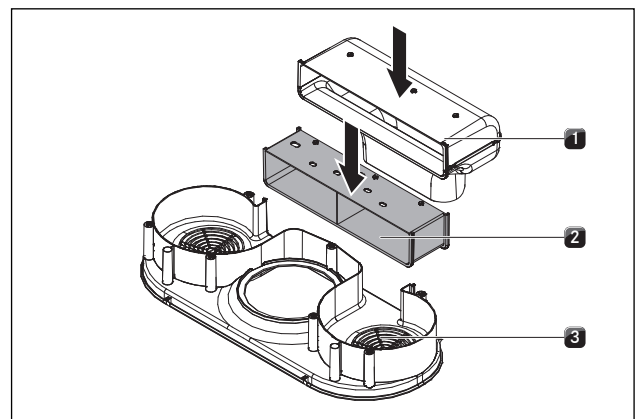


Fig. 6.30 Inserting the air duct extension

[1] Exhaust air arc
[2] Exhaust air duct extension
[3] Air guiding housing

- ▶ Insert the exhaust air duct extension [2] into the groove of the air guiding housing [3].
- ▶ Insert the exhaust air arc [1] into the groove of the exhaust air duct extension [2].

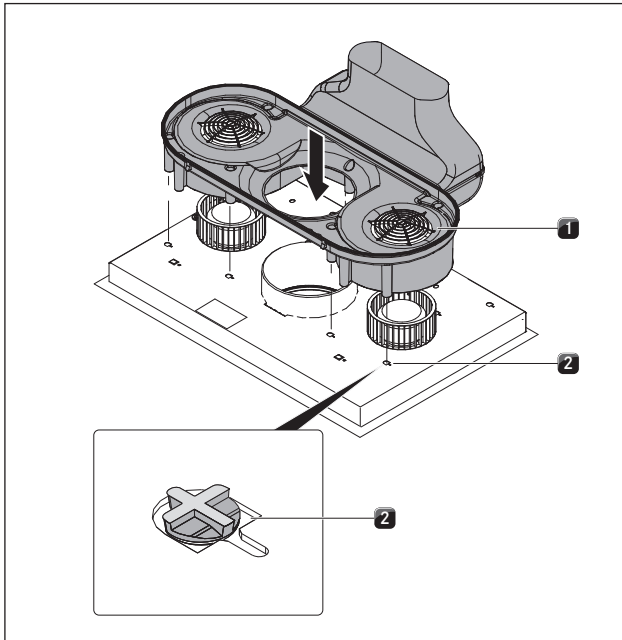


Fig. 6.31 Placing the airflow assembly on the cooktop base

- [1] Airflow assembly
[2] Openings

- ▶ Position the airflow assembly [1] on the cooktop base in such a way that all retaining hooks fit into the openings [2].

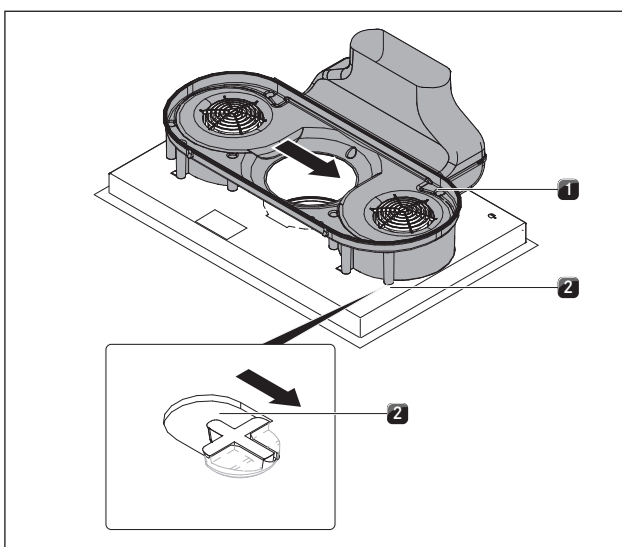


Fig. 6.32 Engaging the airflow assembly

- [1] Airflow assembly
[2] Openings

- ▶ Now move the airflow assembly [1] to the right until it is fully engaged in the opening slot [2].

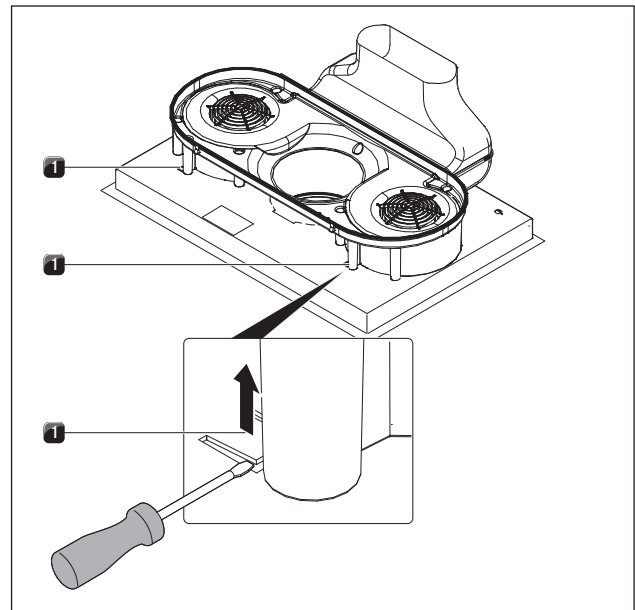


Fig. 6.33 Position lock

- [1] Shackles for transportation and position lock

- ▶ Press the two shackles [1] for the position lock upward.
- ▶ Raise the cooktop with integrated cooktop extractor.
- ▶ Turn the glass ceramic side upward.

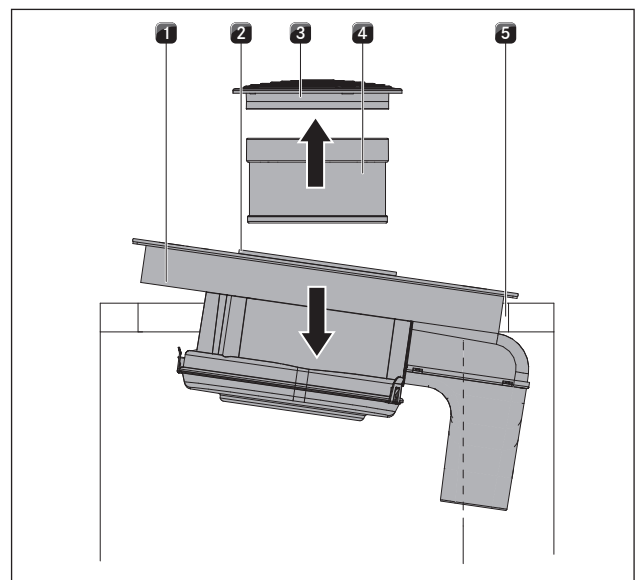


Fig. 6.34 Inserting the cooktop

- [1] Cooktop
[2] Suction opening
[3] Air inlet nozzle
[4] Stainless steel grease filter
[5] Worktop cut-out

- ▶ Use the suction opening [2] as a handle during insertion.
- ▶ Hold the suction opening [2].
- ▶ Insert the cooktop in the middle of the worktop cut-out [5].

For surface mounting

- ▶ Make sure that the sealing tape is resting on the worktop.

For flush installation

- ▶ Make sure that the sealing tape of the cooktop is sealed well all the way round.
- ▶ If applicable, insert the height adjustment plate.

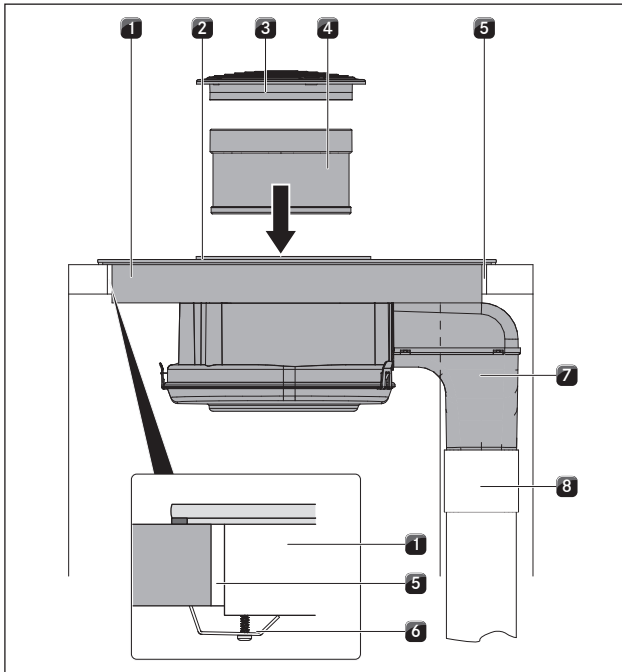


Fig. 6.35 Connect the air duct

- [1] Mounting bracket
- [1] Exhaust air arc
- [2] Exhaust air duct

- ▶ Connect the exhaust air duct [8] at the installation site to the exhaust air arc [7].
- ▶ Seal the duct connection so that it is airtight using adhesive sealing tape UDB1.
- ▶ Fasten the cooktop to the worktop using the mounting brackets [6].
- ▶ Next, insert the stainless steel grease filter [4] and the air inlet nozzle [3].
- ▶ Seal the surrounding gap with black, heat-resistant silicone sealant.

6.7 Establishing the power connection

- ▶ Observe all safety and warning information (see the Safety chapter).
- ▶ Observe all national and regional laws and regulations as well as the supplementary regulations of the local utility companies.

INFO The power connection may only be established by certified specialists. He/she also assumes responsibility for the proper installation and commissioning.

INFO Connections via plug-in contacts (Schuko plugs) are not permitted.

INFO The device complies with IEC 61000-3-12

- ▶ Switch off the main switch/automatic circuit breaker before connecting the cooktop.
- ▶ Protect the main switch/automatic circuit breaker from being switched on without permission.
- ▶ Make sure the device is not energised.
- ▶ Connect the cooktop exclusively via a fixed connection to an H 05 VV-F power supply cable with corresponding minimum cross-section (see tab. Fuse protection and minimum cross-section).

Connection	Fuse protection	Minimum cross-section
3-phase connection	3 x 16 A	2.5 mm ²
2-phase connection	2 x 16 A	2.5 mm ²
1-phase connection	1 x 32 A	4 mm ²

Tab. 6.2 Fuse protection and minimum cross-section

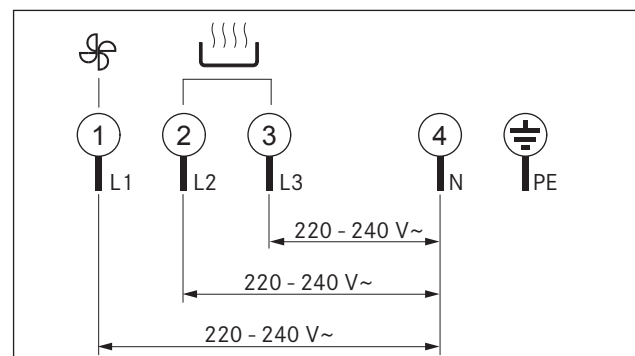


Fig. 6.36 Connection diagram 3-phase connection

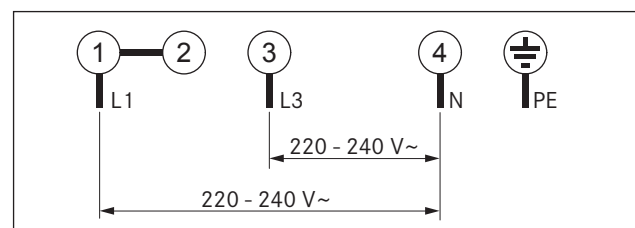


Fig. 6.37 Connection diagram 2-phase connection

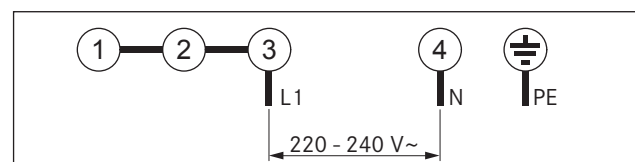


Fig. 6.38 Connection diagram 1-phase connection

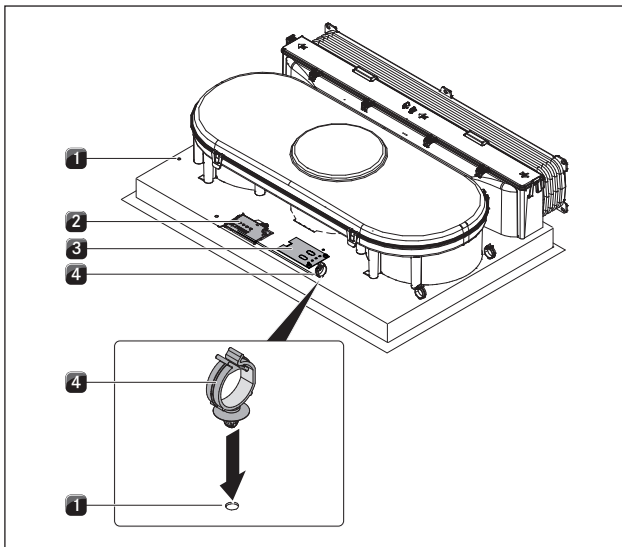


Fig. 6.39 Electrical connections of the cooktop

- [1] Bore holes
- [2] Power supply
- [3] Connection control
- [4] Cable mounting clip

- ▶ Connect the power supply cable to the power supply [2] of the cooktop with cooktopFig. 6.36r in accordance with the relevant connection diagram (see fig. 6.36 Connection diagram).
- ▶ For a 1-phase or 2-phase connection, connect the relevant contacts with the BKAS connector clip (in scope of delivery).
- ▶ Fasten the cable mounting clips [3] to the designated bore holes [1] either on the left or right hand side for the cable routing to the rear.
- ▶ Ensure that the cable is not caught or damaged and is not able to touch any hot hobs.
- ▶ Verify that the installation was done correctly.
- ▶ Switch on the main switch/automatic circuit breaker.
- ▶ Put the cooktop into operation (see the Operation chapter).
- ▶ Check all the functions are working correctly.

6.8 Device power management (overall power reduction)

INFO The device power management function can be set in the service menu. Accessing the service menu and changing the power management setting may only be performed by a certified specialist.

The total device power can be reduced to 4.4 kW upon initial commissioning if the required electrical power cannot be provided at the installation site. The connection must always be equipped with 20 A fuse protection as a minimum.

Programming the device power management

Prerequisites:

- The cooktop is switched off.
- All cooking zones are switched off.
- ▶ Separate the device from the voltage supply using the LS switch, fuses, automatic circuit breakers or contactors.
- After re-establishing the voltage supply, you have up to two minutes to open the service menu.
- ▶ Re-connect the appliance to the voltage supply.
- ▶ Press and hold the multi-function button.
- ▶ Briefly press the timer button.
- A short signal tone will sound and the front half of the setting ring lights up.
- ▶ Now release the multi-function button.
- ▶ Swipe the setting ring in a circular, clockwise motion to move from 3 to 8.

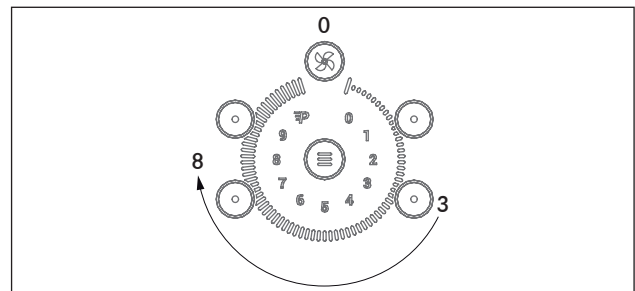


Fig. 6.40 Opening the service menu

- \square is displayed intermittently with \square and \square on the left front cooking zone indicator.
- \square is displayed in the left back cooking zone indicator (factory setting).
- ▶ Use the multi-function button to select the menu level \square .
- ▶ Press any button on the setting ring to change the setting from \square to \square .
- ▶ Press the timer button to save the change.
- The cooktop is ready for use.

Menu setting \square	Cooking zone power	
	Left side	Right side
\square	3.7 kW	3.7 kW
\square	2.2 kW	2.2 kW

Tab. 6.3 Device power management

6.9 Connect the external switch contact

INFO The Home-In and Home-Out communication connection must only be connected by a certified specialist. He/she also assumes responsibility for the proper installation and commissioning.

When using Home-In and Home-Out, you will require the relevant documents for the external switching devices in order to ensure safe device connection and operation.

The following switch connections can be used:

Contact	Function	Connection
Home-In	Cooktop extractor on/off connection for external switch contact (contact closed: cooktop extractor on)	30 V DC 0.7 mA
Home-Out	Electrically isolated contact for controlling external installations depending on the operation of the cooktop extractor (cooktop extractor on: contact closed)	Maximum 250V/4A

Tab. 6.4 Home-In and Home-Out switch connections

INFO The Home-In contact can be used for external safety devices (e.g. window contact switches). If the switch is open, the cooktop extractor is out of operation.

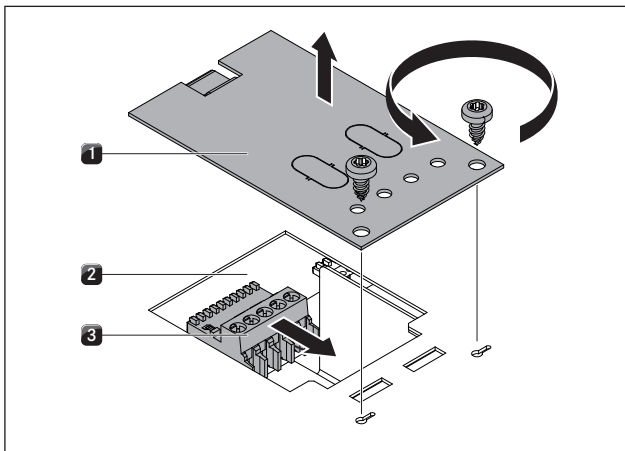


Fig. 6.41 Opening the cover and disconnecting the contact plug

- [1] Cover
- [2] Electronic unit
- [3] Contact plug

- ▶ Open the cover [1].
- ▶ Adhere to the connection diagram when connecting Home-In and Home-Out.
- ▶ Disconnect the contact plug [3] from the electronic unit [2].

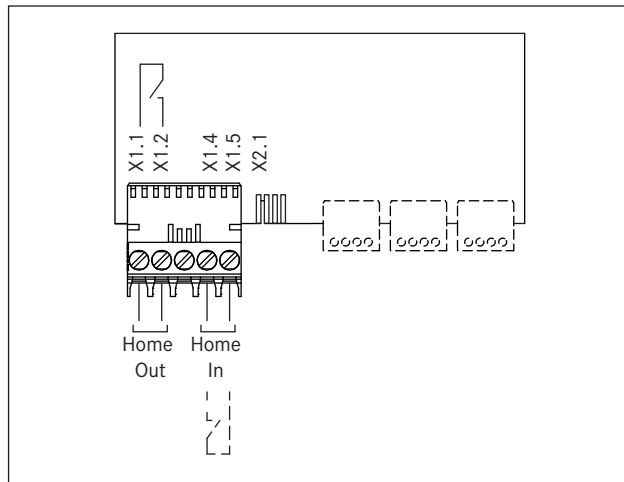


Fig. 6.42 External switch contacts connection diagram

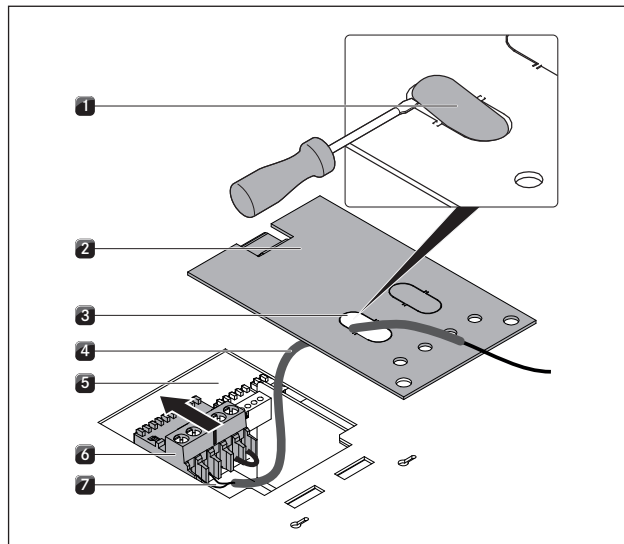


Fig. 6.43 Connecting the cable

- [1] Sealing cover
- [2] Cover
- [3] Cable opening
- [4] Protective hose
- [5] Electronic unit
- [6] Contact plug
- [7] Cable connection

- ▶ Remove the sealing cover [1] for the cable opening [3] with a screw driver.
- ▶ Move the protective hose [4] onto the cable [7].
- ▶ Guide the cable [7] with the protective hose [4] through the cable opening [3] in the cover.
- ▶ Remove the installed bridge.
- ▶ Connect the cable for the relevant contact to the contact plug [6] in accordance with the relevant connection diagram (see fig. Connection diagram for external switch contacts).

INFO The Home-In contact must be bridged if this is not used (bridged on delivery).

- ▶ Connect the contact plug [6] to the electronic unit [5].
- ▶ Ensure that the protective hose [4] is located directly on the contact plug [6] and that the protective hose [4] goes through the opening [3] in the cover [2].

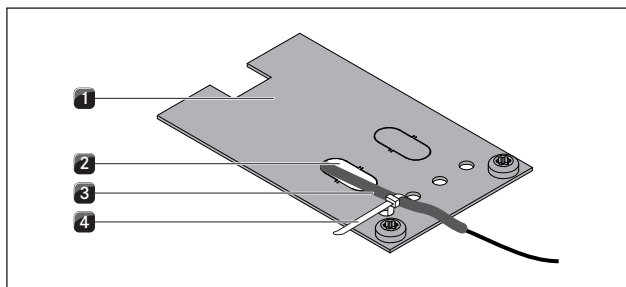


Fig. 6.44 Attaching tension relief

- [1] Cover
- [2] Cable opening
- [3] Protective hose
- [4] Cable tie

- ▶ Attach the cable tie [4] to the cover [1].
However, do not yet tighten the cable tie.
- ▶ Avoid tension on the cable.
- ▶ Close the cover [1].
- ▶ Tighten the cable tie [4] (tension relief).
- ▶ Ensure that the cable is not caught or damaged and is not able to touch any hot hobs.
- ▶ Verify that the installation was done correctly.
- ▶ Switch on the main switch/automatic circuit breaker.
- ▶ Put the cooktop extractor into operation (see the Operation chapter).
- ▶ Check all the functions are working correctly.

6.10 Handover to user

Once installation is done:

- ▶ Explain the important functions to the user.
- ▶ Explain all safety-relevant aspects of operation and handling to the user.
- ▶ Provide the user with the accessories and operating and installation instructions to be kept in a safe place.

7 Operation

- ▶ Observe all safety and warning information during operation (see the Safety chapter).

INFO Only operate the cooktop if the stainless steel grease filter and the air inlet nozzle have been installed.

7.1 General operating instructions

The cooktop or cooktop extractor is operated using the operating panel.

The selection of the cooking zone is performed by the direct selection of the assigned sensor button on the operating panel.

There are 9 power levels and one power setting available for each cooking zone and the cooktop extractor.

The selection on the setting ring is performed by direct selection or by uniformly swiping clockwise or anti-clockwise.

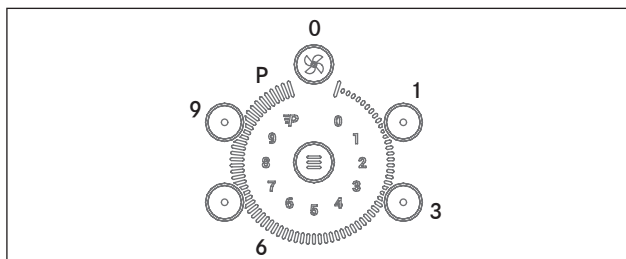


Fig. 7.1 Setting ring with power level positions

7.2 Operating the cooktop

Switching on

INFO If the display shows \square and no other input is made, the device will switch off automatically after 20 seconds.

- ▶ Press the on/off switch I to switch on the device.
- The power level \square is shown on the display.

Switching off

INFO Use the operating panel to switch off the cooking zone after use. Do not rely on the pan size recognition.

- ▶ Press the on/off switch I to switch off the device.
- ▶ Pay attention to the residual heat display (see the Device Description chapter).

7.2.1 Select cooking zone

- ▶ Press the cooking zone button for the desired cooking zone.
- The \square in the cooking zone indicator lights up more brightly.

7.2.2 Adjusting the power level

- ▶ Press the desired power level or
- ▶ Press and uniformly swipe round the setting ring until the desired power level is reached.

7.2.3 Changing the power level

- ▶ Press the cooking zone button for the desired cooking zone.
- The cooking zone indicator lights up more brightly.
- ▶ Select the desired power level.

7.2.4 Selecting the power setting

- ▶ Press the cooking zone button for the desired cooking zone.
- The cooking zone indicator lights up more brightly.
- ▶ Select power setting P .
- The power setting P is displayed in the cooking zone indicator.

7.2.5 Switching the power setting off early

- ▶ Press the cooking zone button for the desired cooking zone.
- The cooking zone indicator lights up more brightly.
- ▶ Select another power level.
- The current power level is displayed in the cooking zone indicator and the power setting is deselected.

7.2.6 Switching off the cooking zone

- ▶ Press the cooking zone button for the desired cooking zone.
- The cooking zone indicator lights up more brightly.
- ▶ Press the power level position \square .
- ▶ \square will appear on the display for a few seconds, then the display will turn off.

7.2.7 Pay attention to the residual heat display

After switching it off, the cooking zone remains hot. H is displayed in the cooking zone indicator (residual heat display). The cooking zone indicator will go out after sufficient cooling time (temperature < 60°C).

Info While H is displayed in the cooking zone indicator (residual heat display), do not touch the cooking zone or place any heat-sensitive objects on top of it. Risk of burns and fire!

- ▶ Pay attention to the residual heat display.
- ▶ Be careful not to touch or place objects on hot hobs.


7.2.8 Pause function

Switching on the pause function

Prerequisite

- At least one cooking zone is in use.

INFO The pause function switches off automatically after 10 minutes.

- ▶ Press and hold the multi-function button  for approx. 2-3 seconds.
- If there is no input, the display will turn off after 5 seconds.
- ▶ Swipe the setting ring in a circular, clockwise motion to move from 1 to P.

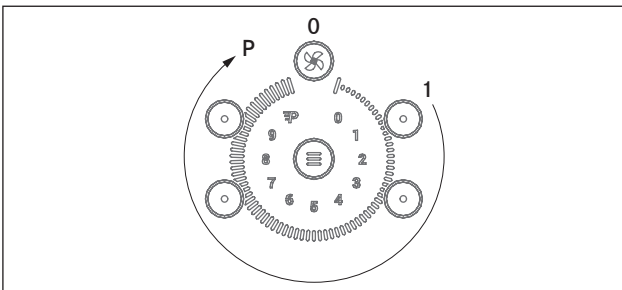
 



Fig. 7.2 Switching on the pause function

- The segments are displayed on the circular display in accordance with the position.
-  appears in all the cooking zone indicators and two short successive beeps confirm activation.
- The pause function is activated.
- The cooktop extractor remains in operation at a lower power level.

Switching off the pause function

- ▶ Press the multi-function button .
- If there is no input for 10 seconds, the pause function will continue.
- The setting ring will show the last segment.
- ▶ Swipe the setting ring in a circular, anticlockwise motion to move from P to 1.

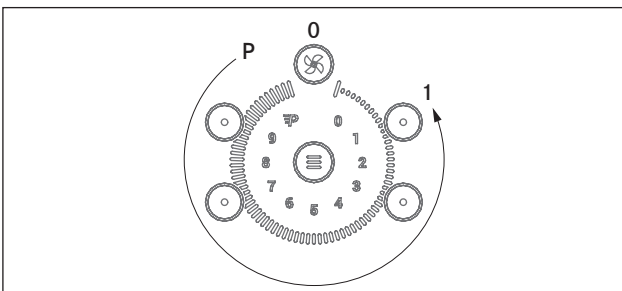


Fig. 7.3 Switching off the pause function

- The segments are displayed on the circular display in accordance with the position.
- All displays will show the power level that was originally set.

- The pause function is deactivated.

 

7.2.9 Bridging function

If the bridging function is active, two cooking zones will operate at the same time on the same cooking level. The front cooking zone will also control the rear, bridged cooking zone.

 
7.2.10 Switching on the bridging function

Prerequisite

- The cooktop is switched on.
- All cooking zones are switched off.

- ▶ Select the front cooking zones and hold down the cooking zone selection button.
- After 2 seconds, the rear cooking zone indicator will show  and there will be a beep.
- ▶ Press the cooking zone selection button for the rear cooking zone to activate the bridging function.
- ▶ Set a power level on the front cooking zone within 3 seconds.
- The bridging function is activated and the rear cooking zone indicator shows .
- If there is no input within 3 seconds, the bridging function will end.



7.2.11 Switching off the bridging function

- ▶ Switch the power level of the front cooking zone to .
- After 3 seconds, the bridging function is deactivated.

7.2.12 Automatic heat up function

 
Switching on the automatic heat up function


Prerequisite

- The cooktop is switched on.
- A cooking zone is switched on.
- ▶ The automatic heat up function is activated if you press and hold the desired continuous cooking level (1 to 8) for 2 seconds.
- The cooking zone indicator will display the symbol  to show that the automatic heat up function is activated, as well as the continuous cooking level set, for example .

Changing the automatic heat up function


The power level of the continuous cooking level can be changed within 15 seconds of activation.

- ▶ Select the cooking zone.
- ▶ Select the desired power level.
- ▶ The selected continuous cooking level, e.g. , appears in the cooking zone indicator.



After the end of the automatic heat up function (see the Device Description chapter), the cooking session will continue with the desired continuous cooking level, e.g. .

7.2.13 Switching off the automatic heat up function

The activated automatic heat up function will end prematurely if you

- ▶ change the power level;
- ▶ activate the power setting P;
- ▶ activate the heat retention level \cup ;
- ▶ switch off the cooktop using the on/off switch .

7.2.14 Heat retention level

- The cooktop is switched on.
- ▶ Select a cooking zone.
- ▶ Press the multi-function button  several times to increase the heat retention level.
- The cooking zone indicator will display the relevant heat retention level, e.g. \cup .
- ▶ Press the multi-function button  again.
- The heat retention level is deactivated.
- The cooking zone will automatically switch off after 8 seconds.

7.2.15 Using the timer function

Info The relevant timer control light shows whether the timer is activated. The timer control light lights up until the cooking zone has automatically switched off after the pre-set time has passed.

Prerequisite

- The cooktop is switched on.

You can use 2 timer functions:

- Short-time timer (egg timer – cooking zone does not switch off automatically).
- Automatic cut-off (for automatically switching off a cooking zone).

You can set a time range of between 1 and 99 minutes for both timer functions.


INFO After the end of the time set, 00 will appear in the time display for a few seconds and the dot in the display or the relevant timer control light will flash. A signal tone will sound for a few seconds.

- The signal tone and the flashing are automatically deactivated after 2 minutes.


7.2.16 Switching the signal beep off early

- ▶ Press any sensor button on the operating panel to end the signal tone prematurely.

7.2.17 Setting the short-time timer (egg timer)

- ▶ Press the timer button .
- 00 will appear in the timer display for a few seconds and the dot below the display will flash.

- If there is no input, the timer display will turn off after 10 seconds.

- ▶ Press the timer button  multiple times to increase the duration by +10 minutes each time.
- ▶ Change the minutes in the timer display by making a selection on the setting ring.
- Once the desired time has been selected, the timer starts automatically.

7.2.18 Switching off the short-time timer (egg timer) early

You can switch off the short-time timer early by

- ▶ changing the remaining timer setting to $\cup\cup$.



7.2.19 Setting the automatic cut-off

You can set an automatic cut-off for every cooking zone.

INFO If several cooking zones are activated with an automatic cut-off, the lowest timer value will be shown and the timer control light for the cooking zone in question will light up more brightly.

Prerequisite


- A cooking zone has been selected.
- A power level was set.

- ▶ Select the desired cooking zone.
- ▶ Press the timer button  within 3 seconds.
- 00 will appear in the timer display for a few seconds and the dot next to the display will flash.
- ▶ Press the timer button  multiple times to increase the duration by 10 minutes each time.
- ▶ Change the minutes in the timer display by making a selection on the setting ring.
- Once the desired time has been selected, the timer starts automatically.


After the last input, the set time will be displayed in the timer display for a few seconds.

7.2.20 Switching off the automatic cut-off early

The activated automatic cut-off function will end early if you

- ▶ change the remaining timer setting to $\cup\cup$;
- ▶ switch off the cooktop using the on/off switch .
- ▶ Change the power level to 0.

7.2.21 Changing the timer settings


- ▶ Press the cooking zone button for the cooking zone for which you wish to change the automatic cut-off.
- ▶ Press the timer button  multiple times to increase the duration by 10 minutes each time.
- ▶ Change the minutes in the timer display by uniformly swiping the setting ring.

7.2.22 Switching the childproofing feature on/off

INFO If a cooking zone indicator alternates between displaying **L** and **H**, the cooking zone is still hot.

Switching on the childproofing feature

Prerequisites:

- The cooktop is switched on.
- All cooking zones are switched off.
- ▶ Press and hold the multi-function button  for approx. 2-3 seconds.
- If there is no input, the display will turn off after 5 seconds.
- ▶ Swipe the setting ring in a circular, clockwise motion to move from 1 to P.

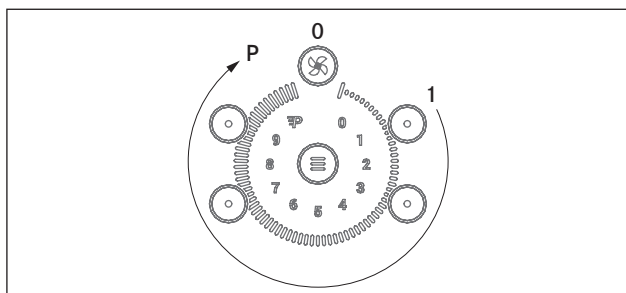



Fig. 7.4 Switching on the childproofing feature

- The segments are displayed on the circular display in accordance with the position.
- **L** is displayed in all cooking zone indicators.
- The childproofing feature is activated.

Switching off the childproofing feature

- The cooktop is switched on.
- ▶ Press and hold the multi-function button  for approx. 2-3 seconds.
- The setting ring will show the last segment.
- ▶ Swipe the setting ring in a circular, anticlockwise motion to move from P to 1.

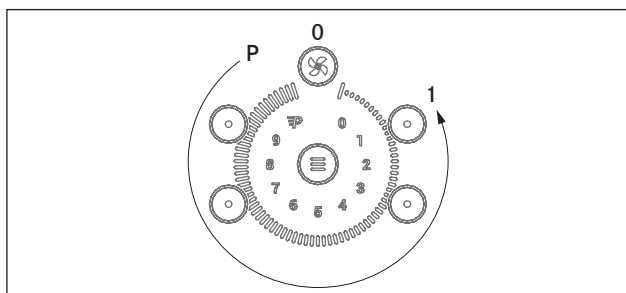


Fig. 7.5 Switching off the childproofing feature

- The segments are displayed on the circular display in accordance with the position.
- All cooking zone indicators display **P**.
- The childproofing feature is deactivated.

The power level you require can now be set for each cooking zone.

7.3 Operating the cooktop extractor


Prerequisite:

- The cooktop with integrated cooktop extractor is switched on.

Recommendations for efficient vapour extraction:

- ▶ Always use a lid on pots that are particularly high. This ensures effective vapour extraction. It also reduces power consumption.
- ▶ Only operate the cooktop extractor at the minimum power level required for an effective vapour extraction. This enables you to improve the performance of the odour filters in recirculation mode.
- ▶ Only operate the hob at the minimum power level required for cooking. This reduces the cooking vapours and the power consumption.
- ▶ Avoid strong drafts.

7.3.1 Selecting a cooktop extractor

- ▶ Press the selection button for the cooktop extractor.
- The  in the cooking zone indicator lights up more brightly.

7.3.2 Adjusting the power level

- ▶ Press the desired position on the setting ring to set the power level or
- ▶ Press and uniformly swipe round the setting ring until the desired power level is reached.

7.3.3 Changing the power level


- ▶ Press the selection button for the cooktop extractor.
- The fan display lights up more brightly.
- ▶ Select the desired power level.
- The set power level is displayed in the fan display.

7.3.4 Selecting the power setting

- ▶ Press the selection button for the cooktop extractor.
- The fan display lights up more brightly.
- ▶ Select power setting **P**.
- The power setting **P** is displayed in the cooking zone indicator.
- The power setting **P** automatically switches to power level **9** after 10 minutes.


7.3.5 Automatic cooktop extractor function

INFO If the automatic cooktop extractor function is activated, the power level can be changed. The automatic cooktop extractor function will be reactivated after 10 minutes.


- ▶ Press the selection button for the cooktop extractor.
- ▶ Press the multi-function button .

- The fan display lights up more brightly.
- The automatic cooktop extractor function is activated.
- A appears on the display.

7.3.6 Switching off the automatic cooktop extractor function

- ▶ Press the selection button for the cooktop extractor.
- ▶ Press the multi-function button .
- The automatic cooktop extractor function is deactivated.


7.3.7 Automatic after-run

- ▶ Press the selection button for the cooktop extractor.
- The fan display lights up more brightly.
- ▶ Select power level .
- The power level n is shown on the display.
- The cooktop extractor switches off automatically after 20 minutes.

7.3.8 Switching off the automatic after-run early

- ▶ Press the selection button on the cooktop extractor while the automatic after-run is active.
- The automatic after-run is switched off.

7.3.9 Switching off the cooktop extractor

- ▶ Press the selection button for the cooktop extractor.
- The fan display lights up more brightly.
- ▶ Select power level .
- The power level n is shown on the display.
- ▶ Press the selection button for the cooktop extractor again.
- The device switches off.

or

- ▶ Press the on/off switch  to switch off the device.

7.4 Pay attention to the filter service display

If F appears on the fan display, this means the service life of the activated charcoal filter has expired (with recirculation only) and the stainless steel grease filter needs to be thoroughly cleaned:

- ▶ Press the selection button for the cooktop extractor.
- ▶ Press any button.
- F is shown in the fan display.

The filter service display is shown every time the cooktop extractor is switched on and remains active until the filter has been changed and the filter service display is reset. The cooktop extractor can still be operated without limitations.



Changing the filter

- ▶ Switch off the cooktop with integrated cooktop extractor.
- ▶ Observe all warnings that are described in the Cleaning chapter.

- ▶ Replace the activated charcoal filter.
- ▶ Clean the stainless steel grease filter, the air inlet nozzle, the air guiding housing and the housing base.

Resetting the filter service display

If the activated charcoal filter has been replaced (with recirculation only) and the stainless steel grease filter has been cleaned, it will be necessary to reset the filter service display.

- ▶ Switch on the cooktop with integrated cooktop extractor.
- The fan display will show a flashing F .
- ▶ Press the selection button on the cooktop extractor for at least 4 seconds until a flashing  appears. After a few seconds, a solid  will be displayed.
- The filter service display has been reset.

7.5 Saving energy

- ▶ Follow all of the energy-saving tips to use the cooktop with integrated cooktop extractor in an energy-efficient manner.
- ▶ When purchasing cookware, pay attention to the diameter of the base as the upper diameter of the pot is usually specified. The diameter of the base is often smaller.
- ▶ Use pressure cookers. Due to the closed cooking chamber and the overpressure, these save a great deal of time and energy. The short cooking time also helps preserve vitamins.
- ▶ Make sure there is sufficient liquid in the pressure cooker. An empty pot which is still being heated can lead to overheating. This can damage both the cooking zone and the pot.
- ▶ If possible, always seal cookware using a suitable lid.
- ▶ Choose a suitable size of cookware for the amount of food you are cooking. A big pot that is barely filled requires a lot of energy.

8 Cleaning and maintenance

- ▶ Observe all safety and warning information (see Safety chapter).
- ▶ Follow the enclosed manufacturer's information.
- ▶ Make sure that the cooktop and cooktop extractor have been switched off completely and have cooled down prior to the planned cleaning and maintenance work to prevent injury (see the Operation chapter).
- Regular cleaning ensures the longevity of the product and optimal functioning.
- ▶ Adhere to the following cleaning and maintenance cycles:

Component	Cleaning cycle
Operating panel	Immediately after every soiling
Cooktop	Immediately after every soiling every week thoroughly with standard commercially available glass ceramic cleaners
Cooktop extractor	Weekly
Air inlet nozzle and stainless steel grease filter	After every time you prepare very greasy foods; at least weekly, when the fan level indicator = F by hand or in the dishwashing machine (at a max. 65 °C); Only clean the stainless steel surfaces in the polishing direction!
Air guiding housing	Clean every 6 months or when replacing the activated charcoal filter
Activated charcoal filter (only for recirculated air)	Replace after the build-up of odour, when the extraction power has diminished or the fan level indicator shows F

Tab. 8.1 Cleaning cycles

8.1 Cleaning agents

INFO Due to the use of aggressive cleaning agents and abrasion caused by the pot bases the surface will become damaged and dark stains will occur.

You need a special glass ceramic panel scraper and suitable cleaning agents to clean the cooktop.

- ▶ Never use steam cleaners, abrasive sponges, scouring pads, or chemically aggressive cleaning agents (e.g. baking oven spray).
- ▶ Make sure that the cleaning agent does not contain any sand, soda, acids or chloride.

For air inlet nozzle and grease filter

- ▶ Do not use any aggressive, acidic or alkaline cleaning agents.

8.2 Maintaining the cooktop

- ▶ Do not use the cooktop as a worktop or shelf.
- ▶ Do not push or pull cookware across the cooktop.
- ▶ Always lift pots and pans.
- ▶ Keep the cooktop clean.
- ▶ Remove any kind of soiling immediately.
- ▶ Only use cookware which is suitable for glass ceramic panels (see the Device description chapter)

8.3 Cleaning the cooktop

INFO When the cooktop extractor is switched on, the air inlet nozzle is installed to ensure that no small and light objects, such as cleaning wipes made of fabrics or paper are sucked in.

- ▶ Make sure that the cooktop is switched off (see Operating chapter).
- ▶ Wait until all cooking zones are cold.
- ▶ Remove all coarse soiling and food residues from the cooktop with a glass ceramic scraper.
- ▶ Apply the cleaning agent onto the cold cooktop.
- ▶ Rub the cleaning agent with a paper towel or a clean cloth.
- ▶ Wipe off the cooktop while wet.
- ▶ Rub the cooktop dry with a clean cloth.

When the cooktop is hot:

- ▶ Immediately remove molten residues of plastic, aluminium film, sugar or foods containing sugar with a glass ceramic scraper from the hot cooking zone to prevent burning them in.

Special soiling

- ▶ Heavy soiling and stains (limescale stains, pearly shimmering stains) are best to be removed if the cooktop is still warm.
- ▶ Soften dried dirt residues using a damp cloth.
- ▶ Remove dirt residues with the glass ceramic scraper.
- ▶ Always remove grains, crumbs or the like which fall onto the cooktop during general cooking work right away to prevent the surface from being scratched.

Coloured changes and shiny surfaces are not cooktop damage. They do not impact on the function of the cooktop and the stability of the glass ceramic.

Discolourations to the cooktop arise from residues which are not removed and have been burnt in.

Glossy spots are caused by the abrasion of the pot base, especially when using cooking utensils with aluminium bases, or by unsuitable cleaning agents. They are very hard to remove.

8.4 Cleaning the cooktop extractor

The air inlet nozzle and the stainless steel grease filter absorb the greasy components of the kitchen vapour.

- ▶ Make sure that the cooktop and cooktop extractor are switched off (see Operating chapter).
- ▶ Wait until the fan display is 0.
- ▶ Clean the cooktop extractor in accordance with the cleaning cycles (see Tab. 7.1).
- ▶ Clean the surfaces of the exhaust air system using a soft damp cloth, detergent or a mild window cleaning agent.
- ▶ Soften dried-on dirt residues using a damp cloth (do not scratch!).

8.4.1 Removing the air inlet nozzle and stainless steel grease filter

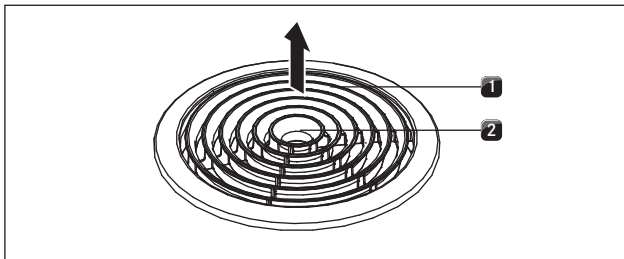


Fig. 8.1 Removing the air inlet nozzle

- [1] Air inlet nozzle
- [2] Access opening

Prerequisite: The fan level indicator indicates 0.

- ▶ Reach into the access opening [2] with your hand.
- ▶ Remove the air inlet nozzle [1] out upwards.

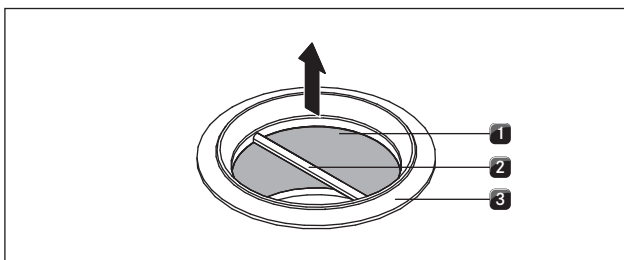


Fig. 8.2 Removing the stainless steel grease filter

- [1] Stainless steel grease filter
- [2] Handle
- [3] Suction opening

- ▶ Grab the stainless steel grease filter using the handle [2].
- ▶ Pull the stainless steel grease filter [1] out of the suction opening [3] upwards.

8.4.2 Cleaning the air inlet nozzle and stainless steel grease filter

INFO Clean the stainless steel surfaces in the polishing direction only.

INFO If the stainless steel grease filter can no longer be cleaned completely, this means the stainless steel grease filter will need to be replaced.

Manual cleaning

- ▶ Use a degreasing cleaning agent.
- ▶ Rinse the inlet nozzle and stainless steel grease filter with hot water.
- ▶ Use a soft brush to clean the inlet nozzle and stainless steel grease filter.
- ▶ After cleaning, rinse the inlet nozzle and stainless steel grease filter well.

Cleaning in the dishwasher

- ▶ Rinse the air inlet nozzle and the stainless steel grease filter with a rinsing program at a maximum of 55 °C.

8.4.3 Installing stainless steel grease filter and air inlet nozzle

- ▶ Grab the stainless steel grease filter using the handle [2] (Fig. 7.2)
- ▶ Insert the stainless steel grease filter [1] into the suction opening.
- ▶ Make sure that the stainless steel grease filter rests against the bottom housing base. A lock is not needed and is not provided.
- ▶ Reach into the access opening [2] of the inlet nozzle with your hand (Fig. 7.1).
- ▶ Insert the air inlet nozzle (Fig. 7.1; [1]) centrally into the suction opening.
- ▶ Press the air inlet nozzle upwards until it engages.

8.5 Cleaning the air guiding housing

Greasy deposits and limescale residues from the cooking vapour can accumulate on the surface of the air guiding housing. Regular, thorough cleaning (see Table 7.1) is thus necessary.

The air guiding housing is on the underside of the cooktop in the floor unit.

8.5.1 Opening the air guiding housing

- ▶ Make sure that the cooktop and cooktop extractor are switched off (see Operating chapter).
- ▶ Wait until the fan display is 0.

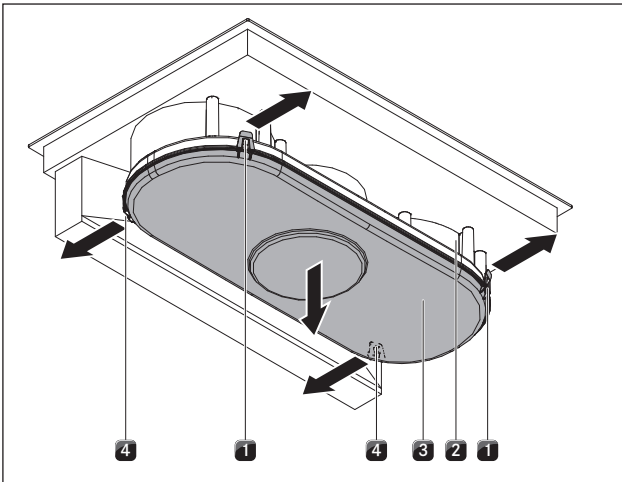


Fig. 8.3 Opening the air guiding housing

- [1] Front locks
- [2] Air guiding housing
- [3] Housing base
- [4] Rear locks

- ▶ Hold the housing base with one hand [3].
- ▶ Open both locks on the rear [4].
- ▶ Open both front locks [1].
- ▶ Remove the housing base [3].
- ▶ Clean the air guiding housing [2] and the housing base [3] with a mild cleaning agent.

8.5.2 Closing the air guiding housing

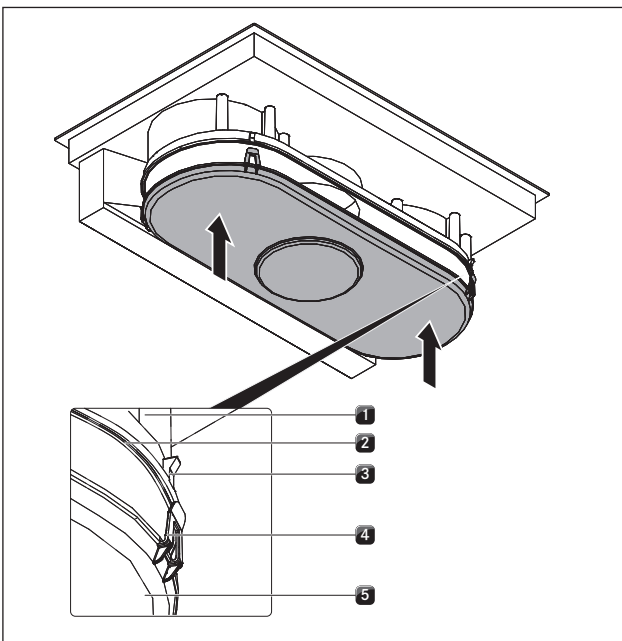


Fig. 8.4 Closing the air guiding housing

- [1] Air guiding housing
- [2] Sealing groove
- [3] Hooks
- [4] Locking stop
- [5] Housing base

- ▶ Using both hands, position the housing base [5] so that the position of the locking straps [4] on the housing base match the position of the hooks [3] on the housing.
- ▶ Insert the housing base at the sealing groove [2] of the air guiding housing [1].
- ▶ Press the housing base [5] upwards until the 4 locks (2 front, 2 rear) engage into the hooks [3].
- ▶ Check that all 4 locking straps [4] have correctly engaged.

8.6 Replacing the activated charcoal filter

Two activated charcoal filters are used only when the cooktop extractor is being operated in recirculated air mode. The activated charcoal filter binds odorous materials which arise during cooking.

INFO The activated charcoal filters must be replaced when the fan level indicator indicates F (filter service display). BAKF activated charcoal filters can be purchased from your specialist. You can also contact BORA on its homepage <http://www.bora.com>.

- ▶ Make sure that the cooktop and cooktop extractor are switched off (see Chapter 6.1).
- ▶ Wait until the fan display is \square .

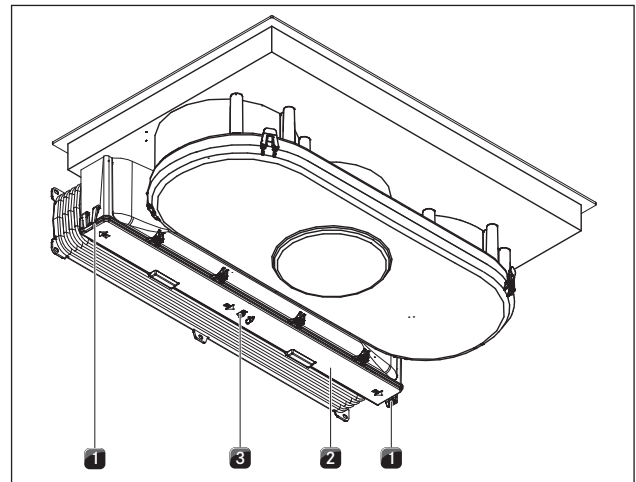


Fig. 8.5 Releasing the activated carbon filter housing lid

- [1] Outer locks
- [2] Activated carbon filter housing cover
- [3] Middle lock

Removing the activated carbon filter

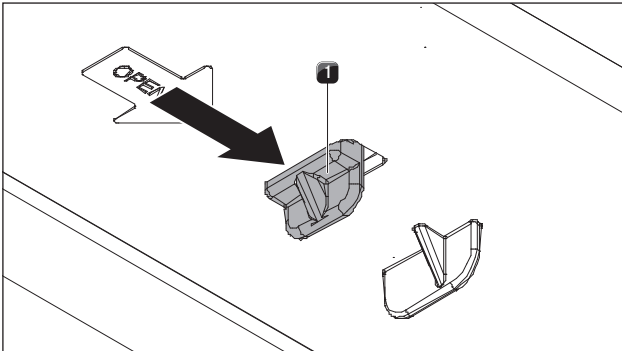


Fig. 8.6 Opening middle lock

[1] Lock, middle

- ▶ Open the lock [1] in the middle.

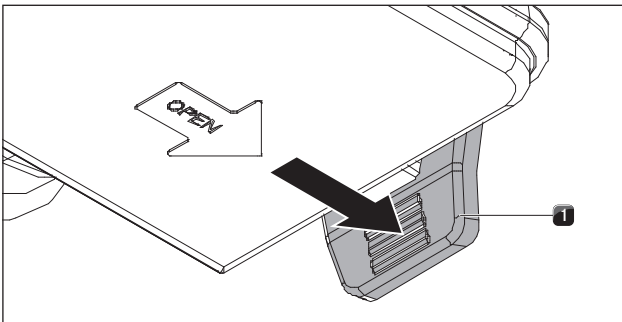


Fig. 8.7 Opening outer locks

[1] Outer lock

- ▶ Open both outer locks [1].
- ▶ Fold the lid (Fig. 7.5; [2]) down until it engages.

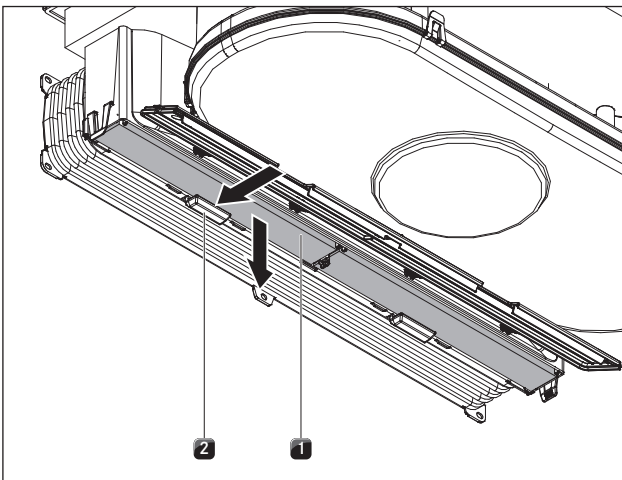


Fig. 8.8 Removing the activated carbon filter

[1] Activated charcoal filter
[2] Filter bracket

- ▶ Hold the activated charcoal filter with one hand [1].
- ▶ Push the filter retainer [2] to the back.

- ▶ Remove the activated charcoal filter by moving it downwards.
- ▶ Dispose of used activated charcoal filters with household waste.

Inserting the activated charcoal filter

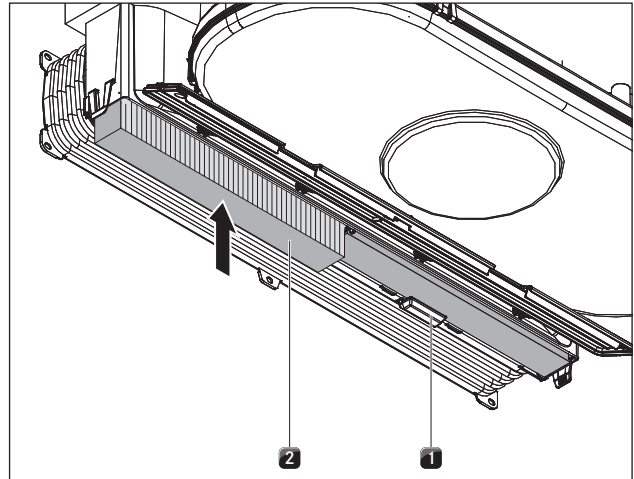


Fig. 8.9 Inserting the activated charcoal filter

[1] Filter bracket
[2] Activated charcoal filter

- ▶ Position the new activated charcoal filter [2] in such a way that the directional arrow is pointing to the rear and is visible from below.
- ▶ Move the activated charcoal filter into the housing.
- ▶ Press the activated charcoal filter upwards until the filter retainer [1] engages.

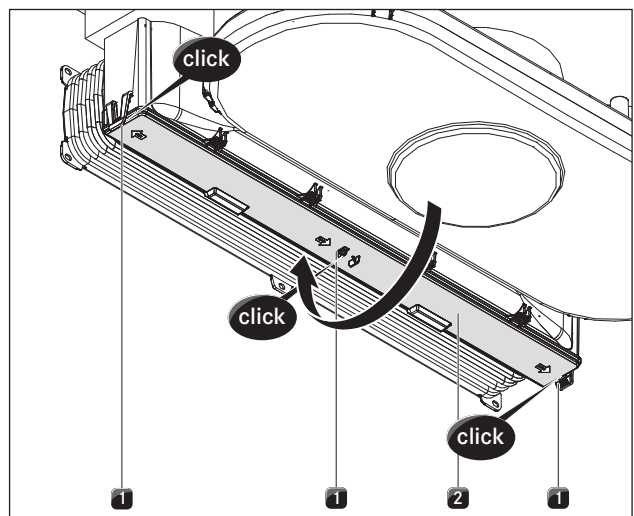


Fig. 8.10 Closing the activated charcoal filter housing lid

[1] Locks
[2] Activated carbon filter housing cover

- ▶ Fold the activated charcoal filter housing lid [2] by moving up upwards.
- ▶ Press on the activated charcoal filter housing lid until the locks [1] engage.

9 Troubleshooting

Operating situation	Cause	Remedy
The cooktop or the fan cannot be switched on.	The fuse or the automatic circuit breaker of the electrical installation of the apartment and/or house is defective.	Replace the fuse. Switch the automatic circuit breaker back on.
	The fuse or the automatic circuit breaker trips several times.	Call the BORA Service Team.
	The power supply is disconnected.	Have a specialist electrician inspect the power supply.
Odours and vapours arise when the new cooktop is put into operation.	This is normal on brand-new appliances.	Wait a few operating hours. Contact the Service Team if the odour persists.
☐ is displayed in the cooking zone indicator.	No or unsuitable cookware has been placed on the cooking zone.	Only use suitable cookware. Select the cookware size depending on the cooking zone (see the Device Description chapter).
⏏ is displayed in the cooking zone indicator.	The childproofing feature is activated.	Switch off the childproofing feature (see the Operation chapter).
A cooking zone or the entire cooktop switches off automatically.	The operating time of a cooking zone has been exceeded.	Put the cooking zone back into operation (see the Operation chapter).
	The overheating protection has tripped.	(see the Device Description chapter)
The power setting is automatically shut off prematurely.	The overheating protection has tripped.	(see the Device Description chapter)
Er03 is shown across all 4 cooking zone indicators and the cooktop switches off during operation.	One or more sensor buttons are covered, e.g. due to finger contact or by objects placed on them.	Clean the operating panel or remove objects (see the Device description chapter).
The cooling fan continues running after the cooktop has been switched off.	The cooling fan will continue to run until the cooktop has cooled down and will then switch off automatically.	Wait until the cooling fan switches off automatically.
E is displayed in the cooking zone indicator.	An error has occurred in the electronic system.	Interrupt the cooktop power supply for approx. 1 minute. If the problem continues to persist after the power supply has been restored, write down the error number and contact the BORA Service Team.
F is displayed in the fan level indicator.	The period of use of the filters has been exceeded.	Replace the activated charcoal filter (with recirculation only) and thoroughly clean the stainless steel grease filter. In case of heavy soiling, replacing the stainless steel grease filter is also recommended (see Cleaning and maintenance chapter).
The extraction performance of the cooktop extractor has decreased.	The stainless steel grease filter is heavily soiled.	Clean or replace the stainless steel grease filter.
	The activated charcoal filter is heavily soiled (BFU only).	Replace the activated charcoal filter.
	There is an object in the air guiding housing (e.g. cleaning cloth).	Remove the trapped object.
ErB1 or ErB2 is shown in the fan level indicator.	The fan is defective or a duct connection has become loose.	Call the BORA Service Team.
E is displayed in the fan level indicator. The fan cannot be switched on.	The Home-In contact is broken.	When using a window contact switch (safety device), the window must be open when the fan is operating.
	The safety device is defective.	Call the BORA Service Team.

Tab. 9.1 Resolving a fault

► In all other instances, call the BORA Service Team (see the Warranty, service and spare parts chapter).

10 Decommissioning, disassembly and disposal

- ▶ Observe all safety and warning information (see the Safety section).
- ▶ Follow the enclosed manufacturer's information.

10.1 Decommissioning

Decommissioning is understood as final shutdown and disassembly. Following decommissioning, the device can either be installed into other units, sold on privately or disposed of.

INFO Electricity and gas connections may only be disconnected by qualified specialists.

- ▶ To decommission, switch the device off (see Operation section)
- ▶ Disconnect the device from the power supply.

10.2 Disassembly

For removal, the device must be accessible for disassembly and disconnected from the power supply. For gas devices, make sure the gas connection is disconnected.

- ▶ Undo the mounting brackets.
- ▶ Remove the silicone joints.
- ▶ Disconnect the device from the extractor duct.
- ▶ Remove the device from the worktop by lifting it upwards.
- ▶ Remove any other accessories.
- ▶ Dispose of the old device and any contaminated accessories as described under "Environmentally-friendly disposal".

10.3 Environmentally-friendly disposal

Disposal of transport packaging

INFO The packaging protects the device from damage in transport. The packaging materials have been selected from environmental and disposal perspectives and are therefore recyclable.

Returning the packaging to the materials cycle saves resources and reduces waste volumes. Your specialist supplier will take the packaging back.

- ▶ Give the packaging to your specialist supplier or
- ▶ Dispose of the packaging properly in line with local regulations.

Disposal of old appliance



Electrical devices marked with this label may not be disposed of in domestic waste at the end of their service life. They must be disposed of at a collection point for the recycling of old electrical or electronic devices. You can find information from your city or district council.

Many electrical and electronic devices still contain valuable materials. But they also contain damaging materials which were necessary for them to function properly and safely. These can damage human health or the environment if disposed of improperly or incorrectly handled.

- ▶ Never put your old appliance in domestic waste.
- ▶ Take the old appliance to a regional collection point for return and recycling electrical and electronic components and other materials.

11 Warranty, technical service and spare parts

- ▶ Observe all safety and warning information (see the Safety section).

11.1 Warranty

The warranty period is 2 years.

11.2 Service

BORA Service:

see back page of operation and installation instructions



- ▶ If there are faults which you are not able to resolve yourself, please contact your BORA specialist supplier or the BORA Service Team.

The BORA Service Team requires the type designation and the build number of your appliance (FD number). Both pieces of information can be found on the nameplate on the back of the instructions and on the appliance base.

11.3 Replacement parts

- ▶ Only use original spare parts for repairs.

INFO Replacement parts can be obtained from your BORA dealer, the BORA online service website at www.bora.com/service or by calling the service number provided.

Nameplate:
(please affix)

Germany:

BORA Lüftungstechnik GmbH
Rosenheimer Str. 33
83064 Raubling
Germany
T +49 (0) 8035 / 907-240
F +49 (0) 8035 / 907-249
info@bora.com
www.bora.com

Australia - New Zealand:

BORA APAC Pty Ltd
100 Victoria Road
Drummoyne NSW 2047
Australia
T +61 2 7900 5580
F +61 2 8076 3514
info@boraapac.com.au
www.boraapac.com.au

Austria:

BORA Vertriebs GmbH & Co KG
Prof.-Dr.-Anton-Kathrein-Straße 3
6342 Niederndorf
Austria
T +43 (0) 5373 / 62250-0
F +43 (0) 5373 / 62250-90
mail@bora.com
www.bora.com

Europe:

BORA Holding GmbH
Prof.-Dr.-Anton-Kathrein-Straße 3
6342 Niederndorf
Austria
T +43 (0) 5373 / 62250-0
F +43 (0) 5373 / 62250-90
mail@bora.com
www.bora.com

